XAPP794 (v1.2) January 2, 2013

1080p60 Camera Image Processing Reference Design

Authors: Mario Bergeron (Avnet, Inc.), Steve Elzinga, Gabor Szedo, Greg Jewett, and Tom Hill (Xilinx, Inc.)

Summary

The Xilinx Zynq™-7000 All Programmable (AP) SoC Video and Imaging Kit (ZVIK) builds on the Zynq-7000 AP SoC ZC702 evaluation kit (ZC702) [Ref 43] by including additional hardware, software, and IP components for the development of custom video applications. The included video reference designs, WUXGA color image sensor, and video I/O FPGA mezzanine card (FMC) with HDMI™ input and output enable users to immediately start development of video system software, firmware, and hardware designs.

This application note describes how to set up and run the 1080p60 camera image processing reference design (camera design) using the ZVIK. Instructions are also included on how to build the hardware and software components as well as how to create the SD card boot image.

The intended audience for this document includes video applications embedded system developers, hardware developers, and system architects. To learn more about the Zynq-7000 AP SoC, the ZVIK, or for further development using the embedded design kit, consult the references mentioned in References. The Appendix provides a list of acronyms used in this application note.

Introduction

This application note describes the 1080p60 camera image processing reference design that showcases various features of the ZVIK, provides a working camera image processing example design, and introduces several Xilinx video IP cores.

Video input is generated by the VITA-2000 image sensor from ON Semiconductor, which is configured for 1080p60 resolution. The raw Bayer sub-sampled image is converted to an RGB image by an image processing pipeline implemented using LogiCORE™ IP video cores that remove defective pixels, de-mosaic, and color-correct the image. A video frame buffer is implemented in the processing system (PS) DDR3 memory, making images accessible to the ARM® processor cores via the AXI Video Direct Memory Access (VDMA). The video frame buffer is not required for the operation of the image processing pipeline, but is included in the design to enable the capture of input video images for analysis. Figure 1 shows a block diagram of the design.

© Copyright 2013 Xilinx, Inc. Xilinx, the Xilinx logo, Artix, ISE, Kintex, Spartan, Virtex, Vivado, Zynq, and other designated brands included herein are trademarks of Xilinx in the United States and other countries. ARM, AMBA, and CoreSight are trademarks of ARM in the EU and other countries. HDMI and High-Definition Multimedia Interface are trademarks of HDMI Licensing LLC. MATLAB is a registered trademark of The MathWorks, Inc. All other trademarks are the property of their respective owners.

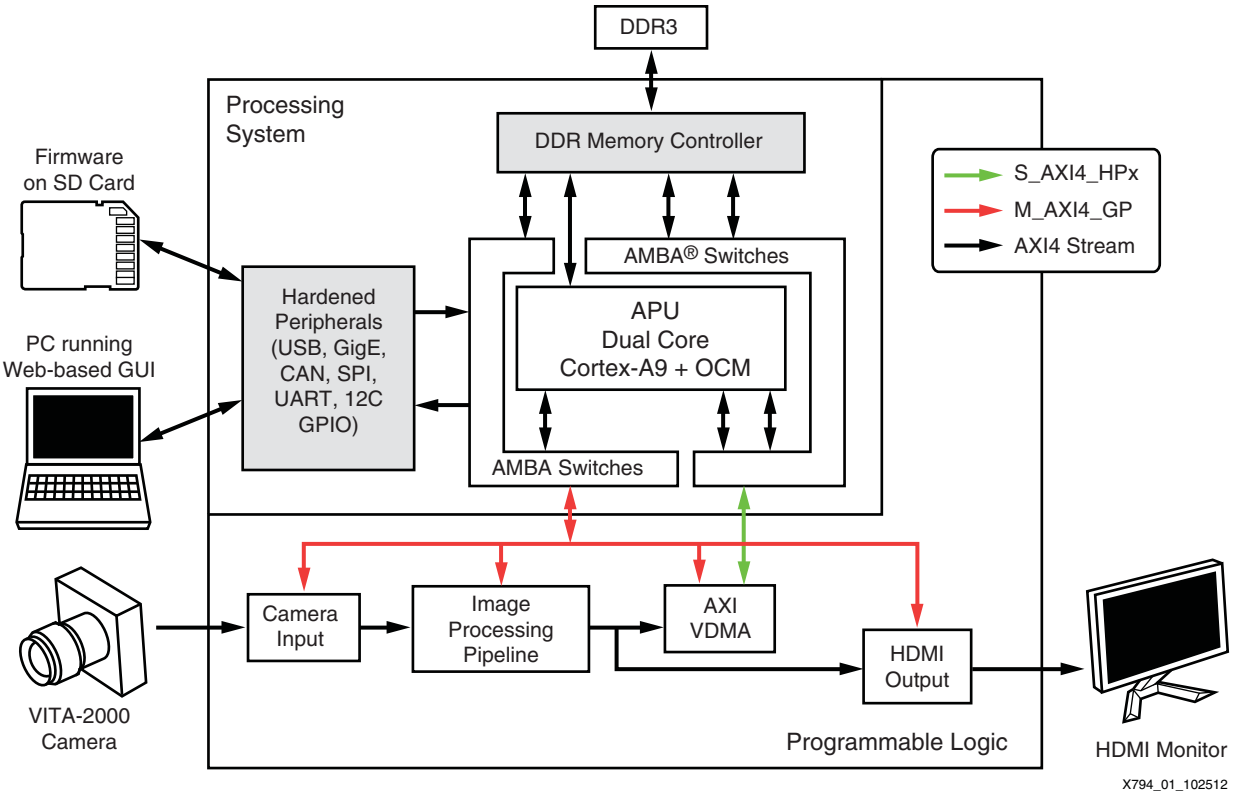

Figure 1: **1080p60 Camera Design Block Diagram**

A web-based graphical user interface (GUI) allows configuring each of the Xilinx video IP cores in the image processing pipeline, displaying information about the incoming image such as histograms of the data, and enables processor-based operations on the data such as automatic white balance and automatic exposure.

The hardware evaluation cores contained in the design time out after approximately four hours, resulting in a blank screen. At this point, the board must be power-cycled to reload the design.

Host PC System Requirements

The host PC requirements to operate the camera design and its applications are:

- 32-bit/64-bit host PC with Ethernet port running Windows XP or Windows 7 Professional 32-bit/64-bit, or Ubuntu 10 or later 32-bit/64-bit Linux distribution.
- UART connected terminal (for example, Tera Term 4.69 or HyperTerminal).
- Zip/Unzip software (for example, 7-Zip).
- Web browser such as Internet Explorer (to operate the web-based GUI).
- USB-UART driver from Silicon Labs [Ref 39] (might already be installed). For information about installing the USB-UART driver, see *Zynq-7000 All Programmable SoC: ZC702 Evaluation Kit and Video and Imaging Kit Getting Started Guide* [Ref 1].

To build the hardware and software components, the ISE® Design Suite: Embedded Edition 14.2 with compatible OS is also required.

Target Hardware Requirements

The target hardware requirements for running the camera design and its applications are:

- Zynq-7000 All Programmable SoC Video and Imaging Kit, including:
  - Xilinx XC7Z020 CLG484-1 SoC-based ZC702 evaluation board.
  - Avnet FMC-IMAGEON FMC module.
  - VITA-2000 camera module (including optics, tripod, and cable).
  - HDMI cable.
  - SD-MMC flash card.
  - 12V power supply.
- HDMI monitor supporting 1080p60 resolution. A DVI monitor can also be used, but an HDMI female to DVI-D male connector adapter must be obtained (not provided with the kit). The connector adapter is available at most electronic retailers or through a variety of online sources.
- SD-MMC flash card writer.

For more information on the Zynq-7000 AP SoC Video and Imaging Kit, refer to:

www.xilinx.com/zvik

For more information on the Zynq-7000 AP SoC ZC702 evaluation board (including hardware user manual, schematics, and BOM), refer to:

www.xilinx.com/zc702

For more information on the Avnet FMC-IMAGEON FMC Module with ON Semiconductor image sensor, refer to:

http://www.em.avnet.com/fmc-imageon-v2000c

Running the Demonstration

This section describes how to run the 1080p60 camera image processing reference design on the ZVIK.

Reference Design File

The reference design files for this application note can be downloaded from:

https://secure.xilinx.com/webreg/clickthrough.do?cid=199792

Table 1 shows the reference design matrix.

Table 1: **Reference Design Matrix**

Parameter	Description
General	
Developer name	Xilinx
Target devices	Zynq-7000 AP SoC
Source code provided	Yes
Source code format	VHDL (some sources encrypted)
IP used	EDK and CORE Generator Video IP Cores
Simulation	
Functional simulation performed	N/A
Timing simulation performed	N/A
Test bench used for functional and timing simulations	N/A
Test bench format	N/A
Simulator software/version used	N/A
SPICE/IBIS simulations	N/A
Implementation	
Synthesis software tools/version used	XST 14.2
Implementation software tools/version used	ISE® Design Suite 14.2: System Edition
Static timing analysis performed	Yes (pass timing in PAR/TRACE)
Hardware Verification	
Hardware verified	Yes
Hardware platform used for verification	Zynq-7000 Video and Imaging Kit

Installing Design Files

Download the ZVIK_Camera_Design_14_2 files to the C: drive of the host PC:

```
C:\zvik_camera
```

Note: If another location is chosen, there should be no spaces in the folder names.

Preparing the SD Card

Pre-built binaries for the camera design are provided in this directory:

```
..\zvik_camera\binaries\sd_content
```

Create a backup copy of the files on the SD card provided with the kit to enable them to be restored if desired. These files are also available on the ZVIK product page. Copy the contents of the `sd_content` directory to the root directory of the SD card.

By default, the design configures the ZVIK for IP address 192.168.1.10. This requires configuring the host computer to a compatible IP address, such as 192.168.1.20. If this is not possible, the IP address of the ZVIK in the configuration script should be changed:

```
..\zvik_camera\binaries\sd_content\config_my_ip.sh
```

On a Windows host, use a text editor that does not alter the end of line characters, such as Notepad.

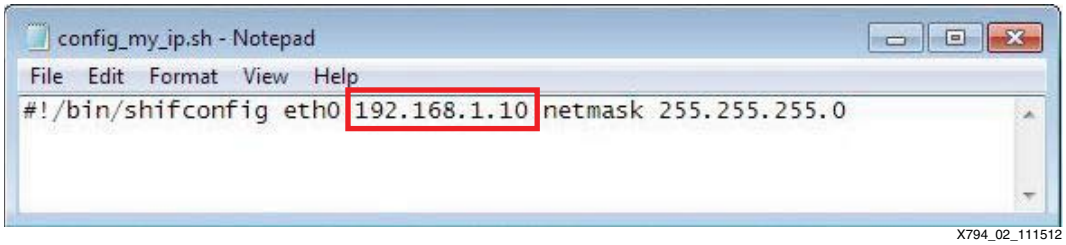

Figure 2: **Modifying the ZVIK IP Address**

With a subnet mask of 255.255.255.0, the first three number groups of the IP address must be identical in both the host computer IP address and the ZVIK IP address. For example, if the ZVIK is configured with the IP address 192.168.1.10 (and subnet mask 255.255.255.0), the host must be configured with an IP address containing identical numbers in the first three positions and a differing number in the fourth group, such as 192.168.1.20.

Configuring the Host IP Address

Configure the IP address of the host computer to one that is compatible with the ZVIK IP address discussed in Preparing the SD Card. Record the host PC's original network settings so they can be restored after running the demonstration. Configure the computer's IP address to 192.168.1.20 (or similar). The subnet mask can be 255.255.255.0. The screen captures and icon names shown below might be slightly different depending on the computer's operating system version.

For Windows 7:

1. Click the **Start** button and select **Control Panel**.
2. Select **Network and Sharing Center**.
3. Select **Change Adapter Settings** from the options on the left panel.
4. Right click the adapter corresponding to the wired Ethernet port identified as a local area connection and select **Properties**.
5. Accept the User Account Control dialog box by selecting **Yes**.
6. Click the **Internet Protocol Version 4 (TCP/IPv4)** entry and select **Properties**.
7. On the General tab, select the radio button for **Use the following IP address**.
8. In the IP address: field, enter **`192.168.1.20`** or a value that is compatible with the ZVIK IP address configured in the previous section.

9. Click the Subnet mask: field and ensure that it is populated with 255.255.255.0. The dialog box should appear be similar to Figure 3.

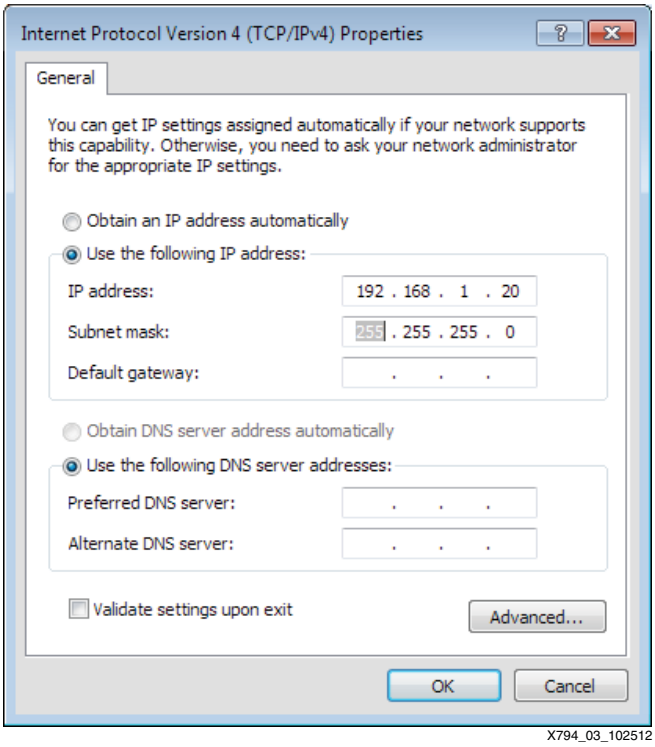
Internet Protocol Version 4 (TCP/IPv4) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
192 . 168 . 1 . 20
Subnet mask:
255 . 255 . 255 . 0
Default gateway:
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Validate settings upon exit
Advanced...
OK
Cancel
X794_03_102512

Figure 3: **Host Computer IP Address Configuration Dialog Box**

10. Select **OK** to close the Internet Protocol Version 4 (TCP/IPv4) dialog box. Select **OK** to close the Local Area Connection Properties dialog box.

Assembling the Camera

If the camera assembly has been completed, go to Setting Up the Hardware.

The ZVIK package contains these components, which must be assembled:

1. IR cut filter
2. Lens (2/3”, 8 mm)
3. VITA-2000-C image sensor module (with C-mount lens holder)
4. Tripod
5. LCEDI cable
6. FMC-IMAGEON FMC module

To assemble the camera:

1. Remove both protective caps from the lens (2) (Figure 4).

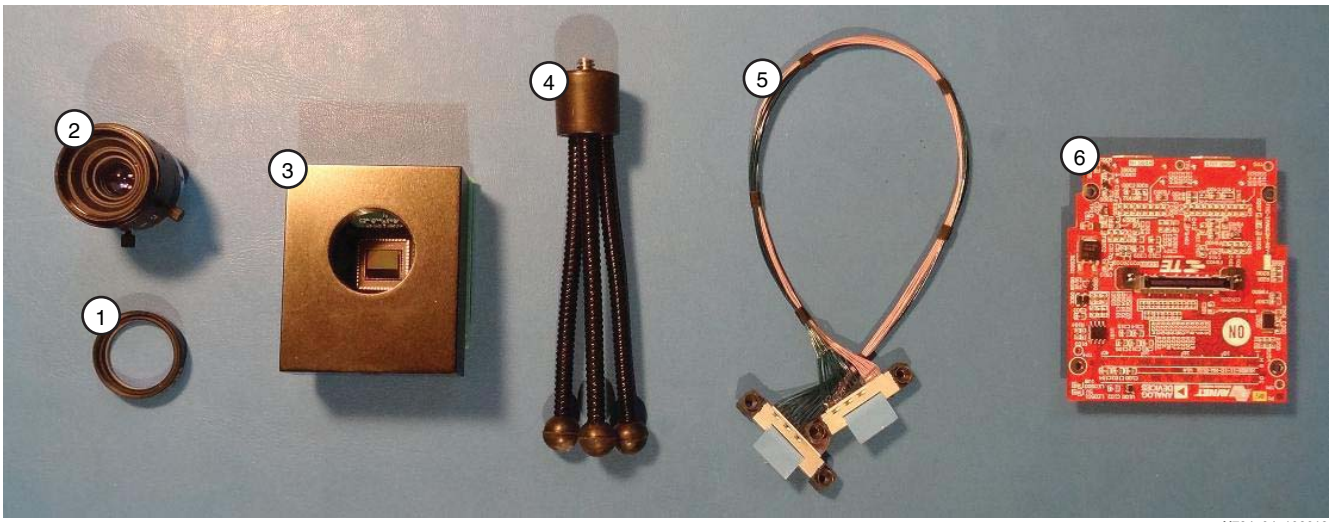

Figure 4: **VITA-2000 Camera Assembly Step 1**

2. Attach the IR cut filter (1) to the lens (2) (Figure 5). The filter screws onto the front of the lens.

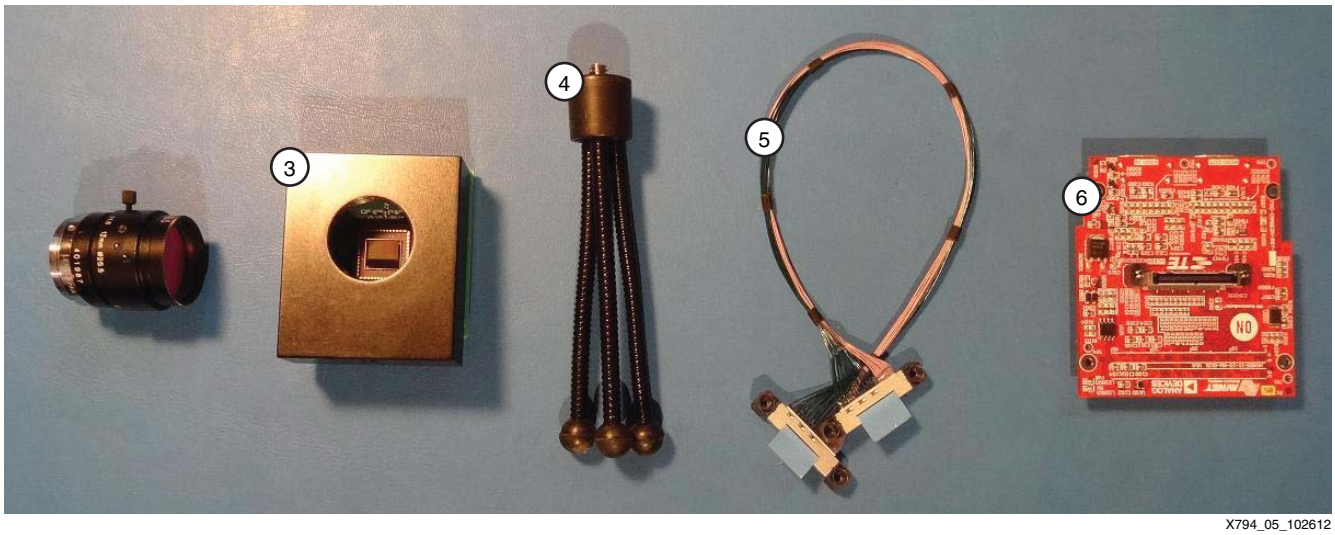

Figure 5: **VITA-2000 Camera Assembly Step 2**

3. Screw the IR cut filter and lens assembly onto the VITA-2000 image sensor module (3) (Figure 6). The image sensor module has a lens holder with an opening for standard C-mount lenses.

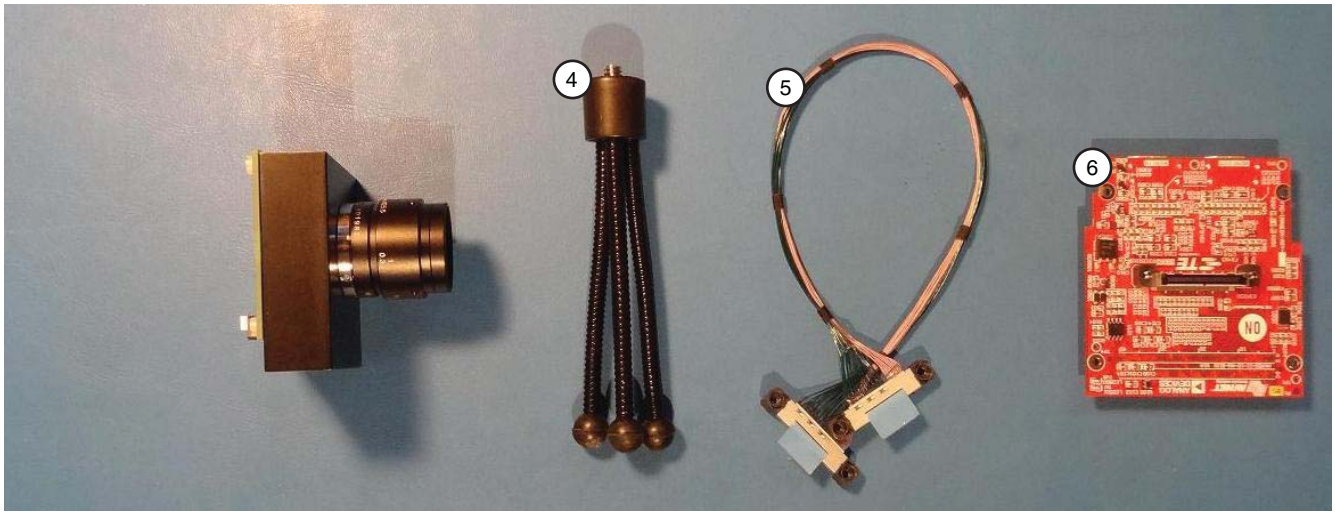

Figure 6: **VITA-2000 Camera Assembly Step 3**

4. Attach the tripod (4) to the bottom of the VITA-2000 image sensor module (Figure 7). The image sensor module lens holder has a hole that accepts standard tripods having a 1/4 inch screw with 20 threads per inch.

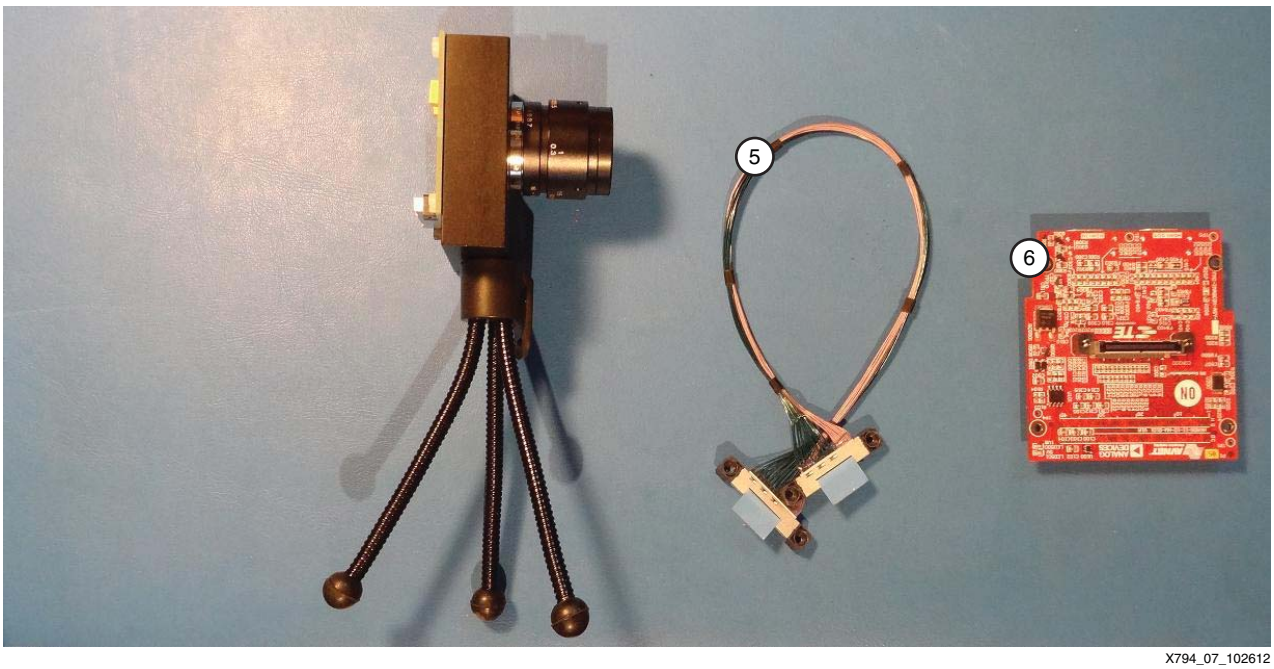

Figure 7: **VITA-2000 Camera Assembly Step 4**

5. Attach the LCEDI cable (5) to the back of the VITA-2000 image sensor module (Figure 8). Both ends of the LCEDI are identical. Either end can be connected to the image sensor module.

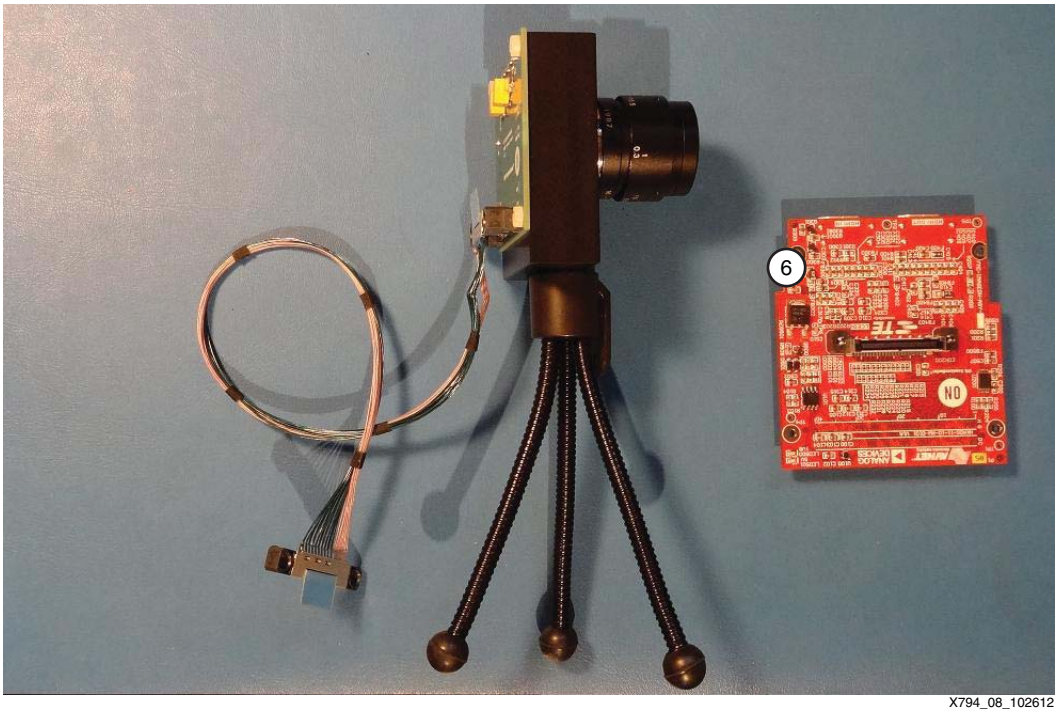

Figure 8: **VITA-2000 Camera Assembly Step 5**

6. Attach the other end of the LCEDI cable to the FMC-IMAGEON FMC module (6) (Figure 9).

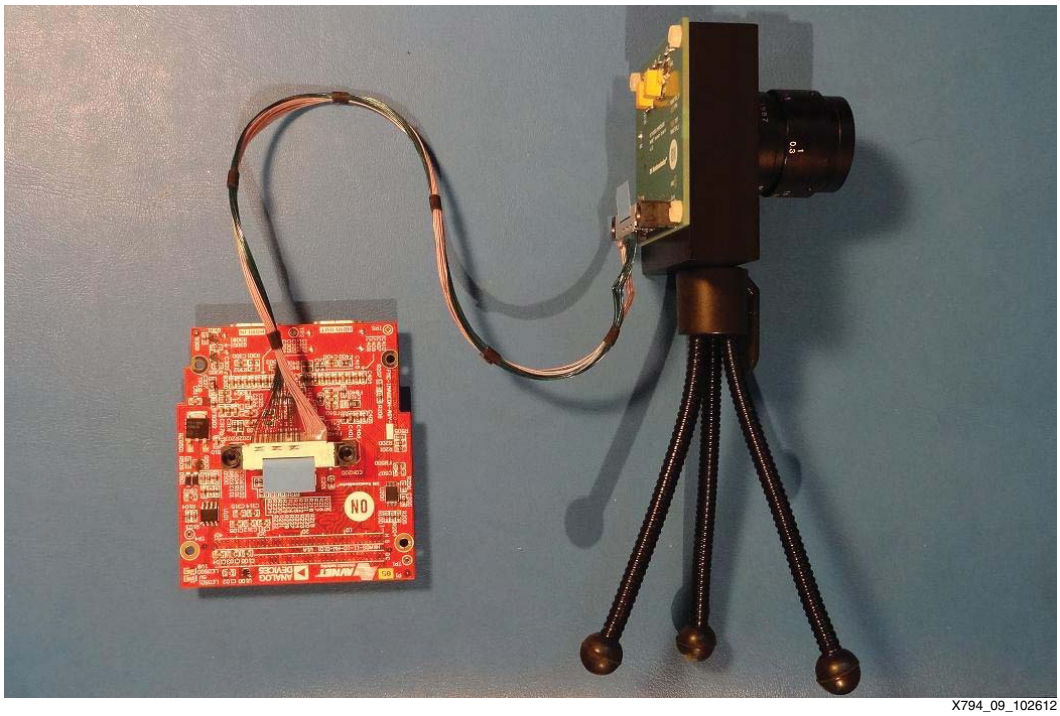

Figure 9: **VITA-2000 Camera Assembly Step 6**

The VITA-2000 color camera assembly is complete.

7. The IMAGEON FMC Module connects to the FMC2 connector of the ZC702 board FMC carrier. The flexibility of the LCEDI cable allows the camera to be positioned in virtually any direction (Figure 10).

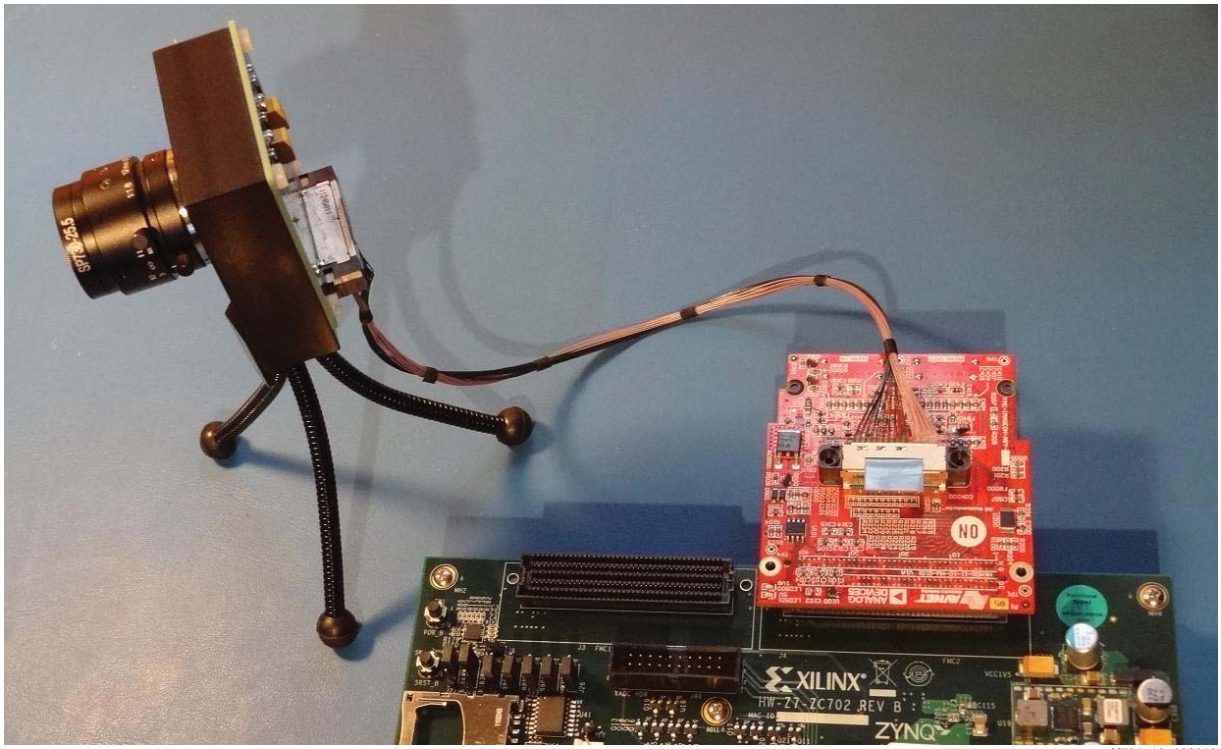

Figure 10: **VITA-2000 Camera Assembly Step 7**

8. The ZVIK package also contains two standoffs and four screws that secure the IMAGEON FMC module to the ZC702 board. The package also contains four longer screws, standoffs, and rubber feet to support the free end of the board. Assemble the hardware, as shown in Figure 11.

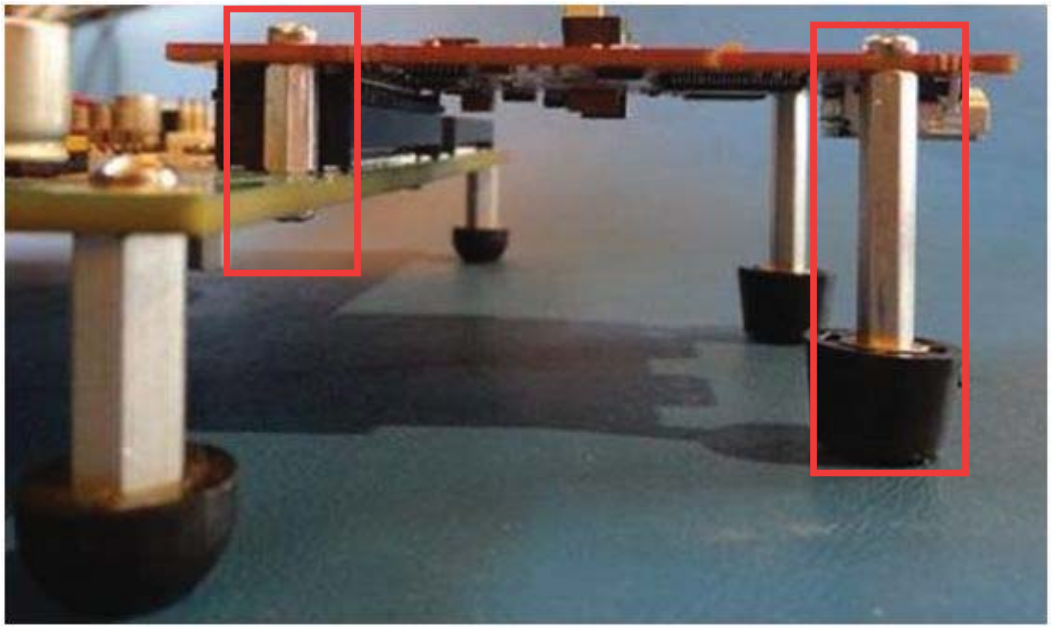

Figure 11: **VITA-2000 Camera Assembly Step 8**

Setting Up the Hardware

Figure 12 illustrates how to connect the ZVIK for the 1080p60 camera design.

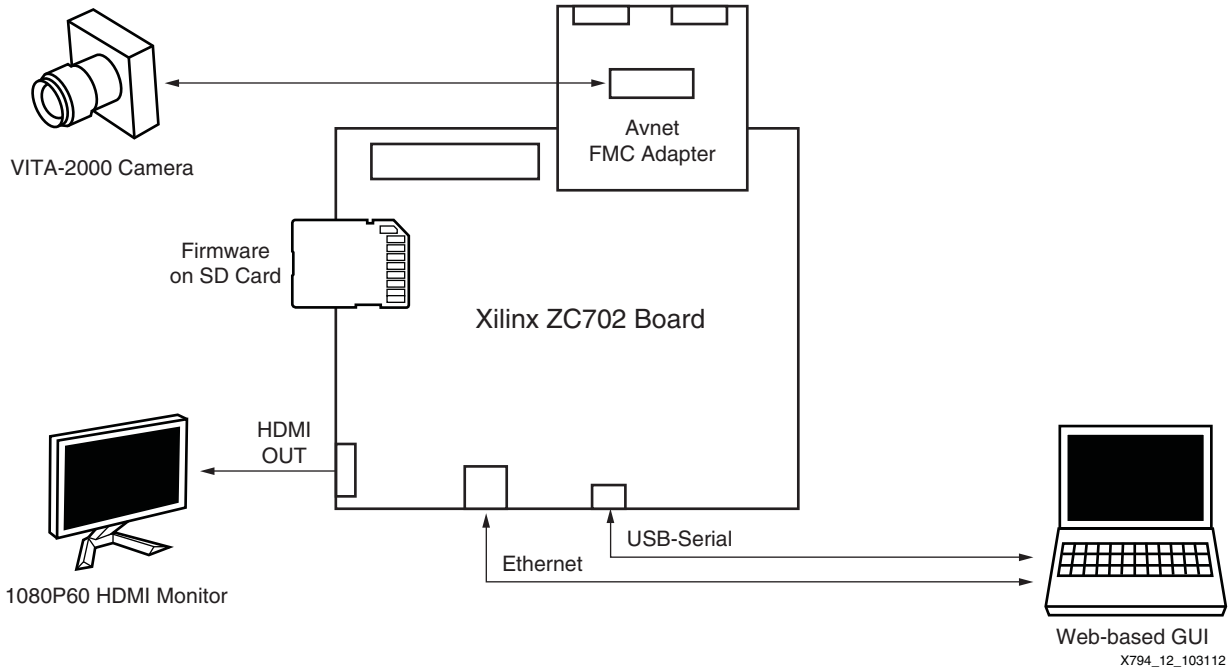

Figure 12: **1080p60 Camera Design Hardware Setup**

Connect the ZVIK hardware as follows:

1. Position the Avnet FMC-IMAGEON board on FMC slot #2 of the ZC702 board.
2. Connect the VITA-2000 camera to the FMC module with the provided LCEDI cable.
3. Connect the HDMI monitor to the ZC702 HDMI out connector (P1) with the provided HDMI cable. If a DVI monitor is used, an HDMI female to DVI-D male connector adapter must be provided. The connector adapter is available at most electronic retailers or through online sources.
4. Connect the USB-Serial port on the ZC702 board (J17 labeled USB UART) to the host computer using the provided USB Mini-B to USB-A cable.
5. Connect the Gbit Ethernet connector on the ZC702 to the host computer using the provided Ethernet cable.
6. Ensure that the power switch on the ZC702 board is off by moving the switch away from the power connector.
7. Connect the 12V power supply to the ZC702 board.
8. Insert the SD card into the ZC702 board SD card connector.
9. Ensure that the switches are set as shown in Figure 13, allowing the ZC702 board to boot from the SD-MMC card.

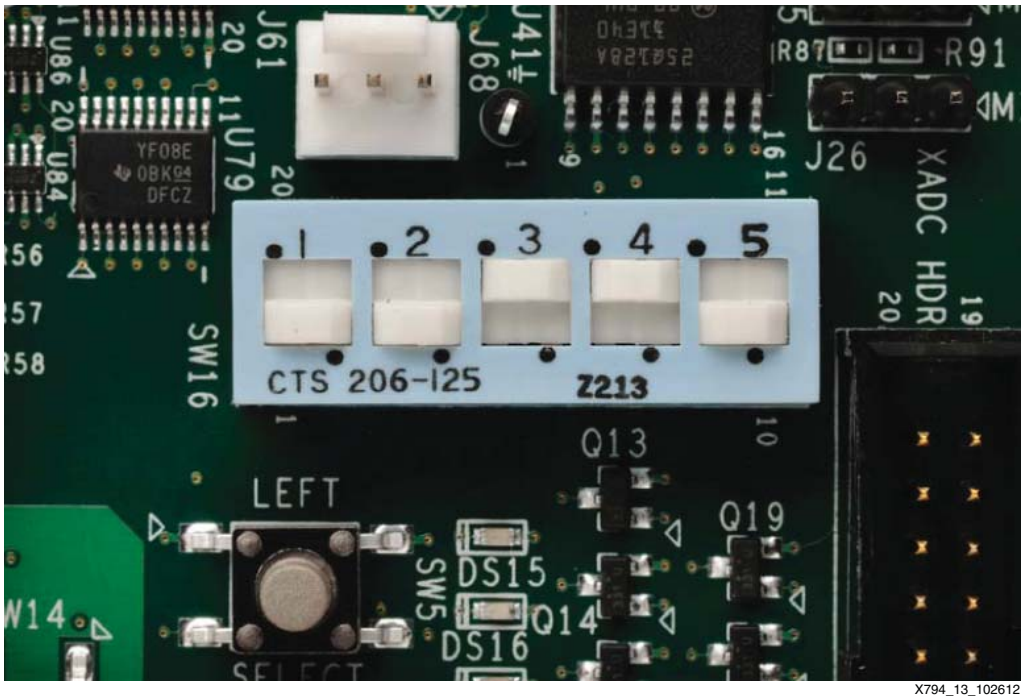

Figure 13: **Switch Settings for the SD-MMC Card Boot Mode Switch**

10. Ensure that the monitor is set for HDMI (or DVI if using an HDMI female to DVI-D male adapter) at 1920 x 1080 resolution.
11. Power on the ZC702 board.

Observing the Linux Console on the Serial Port

During boot, the Zynq-7000 SoC displays these steps on its serial port:

- First stage boot loader (FSBL) output
- U-Boot output
- Linux console output

To view this serial output, open a terminal window using the UART connection program (Terra Term or Hyperterminal) with these settings:

- 115200 baud
- 8 data bits
- No parity
- 1 stop bit
- No flow control

To determine which host computer COM port is mapped to the ZC702 Silicon Labs driver, follow these steps (for Windows):

Note: If not already installed, refer to the *Zynq-7000 All Programmable SoC: ZC702 Evaluation Kit and Video and Imaging Kit Getting Started Guide* [Ref 1].

1. Right-click **My Computer** and select **Properties**.
2. Select the **Hardware** tab.
3. Click **Device Manager**.
4. Expand the Ports (COM & LPT) section.
5. Make note of the COM port for the Silicon Labs CP210x USB to UART Bridge item. This is the COM port that must be selected in the serial terminal program (Figure 14).

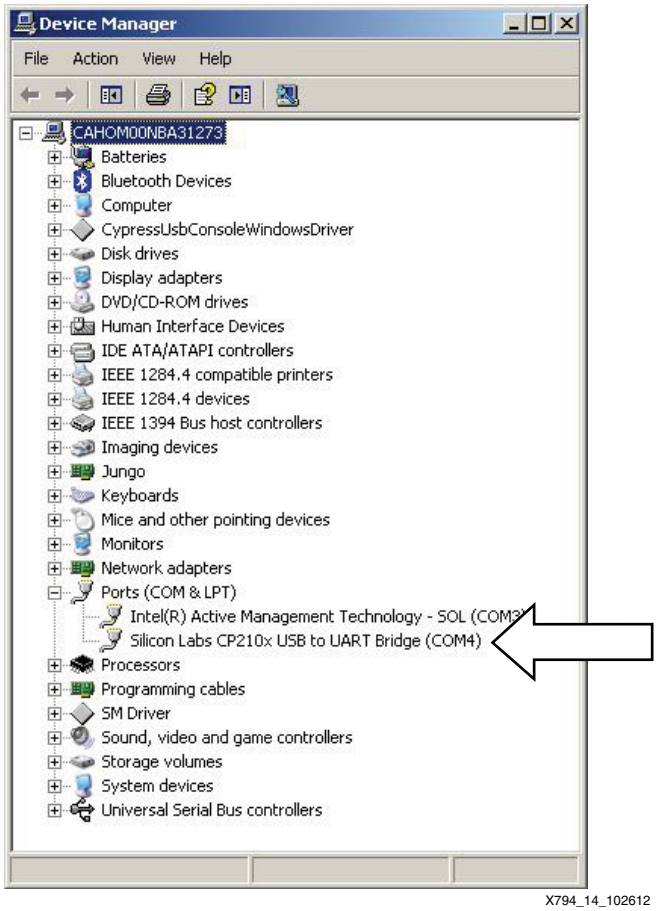

Figure 14: **Determining COM Port in Windows**

In the example illustrated in Figure 14, the COM port is COM4. This can be different for each computer.

To restart the boot process, press the POR_B button (SW1) located close to the SD card connector or power cycle the ZC702 board.

This boot sequence should be observed:

1. The ZC702 board is powered on.
2. The DONE LED is off.
3. The first stage bootloader takes approximately 20 seconds.
4. Camera design hardware is loaded into programmable logic.
5. The DONE LED turns on.
6. U-Boot takes approximately 30 seconds.
7. Linux Kernel boot takes approximately 15 seconds.
8. Camera design software is executed (this takes approximately 5 seconds).

The total boot sequence should take approximately 70 seconds (just over one minute).

U-Boot generates this output on the serial console:

```
U-Boot 2010.09-01918-g068cc03 (Jan 20 2012 - 14:02:15)
Xilinx Pele Emulation Platform

DRAM:  256 MiB
## Unknown FLASH on Bank 1 - Size = 0x00000000 = 0 MB
Flash: 0 Bytes
MMC:   SDHCI: 0
Using default environment

In:    serial
Out:   serial
Err:   serial
Hit any key to stop autoboot:  0
Copying Linux from SD to RAM...
.
.
.
++ Mounting SD card to /mnt
++ Configuring IP Address
GEM: lp->tx_bd ffdfb000 lp->tx_bd_dma 2f220000 lp->tx_skb ee17d580
GEM: lp->rx_bd ffdfc000 lp->rx_bd_dma 2e47f000 lp->rx_skb ee17d680
GEM: MAC 0xefcb686e, 0x0000fb1d, 6e:68:cb:ef:1d:fb
GEM: phydev ef28ca00, phydev->phy_id 0x1410e40, phydev->addr 0x7
eth0, phy_addr 0x7, phy_id 0x01410e40
eth0, attach [Marvell 88E1116R] phy driver
++ Starting telnet daemon
++ Starting http daemon
++ Starting ftp daemon
++ Starting dropbear (ssh) daemon
rcS Complete
```

Finally, the camera demonstration software generates this output on the serial console:

```
-------------------------------------------------------
--    Xilinx Zynq-7000 AP SoC Video and Imaging Kit    --
--      1080P60 Real-Time Camera Demonstration      --
-------------------------------------------------------

FMC-IPMI Initialization ...
Configure ZC702 IIC Mux for Port 6 (FMC2) ...
FMC Module Validation
Board Information:
        Manufacturer    = Avnet
        Product Name    = FMC-IMAGEON
        Serial Number   = 6122
        Part Number     = AES-FMCIMAGEON-G
SUCCESS : Detected FMC-IMAGEON module!
FMC-IMAGEON Initialization ...
FMC-IMAGEON Video Clock Initialization ...
Initialize Video Output for 1080P60 ...
        Video Resolution = 1080P
Configure ZC702 IIC Mux for Port 1 (HDMI) ...
ZC702 HDMI Output Initialization ...
FMC-IMAGEON VITA Receiver Initialization ...
FMC-IMAGEON VITA Initialization ...
FMC-IMAGEON VITA Configuration for 1080P60 timing ...
VITA Status =
        Image Width  = 1920
        Image Height = 1080
        Frame Rate   = 61 frames/sec
Video Detector Initialization ...
Video Detector Configuration ...
Image Processing Pipeline (iPIPE) Initialization ...
Initializing iPipe cores ...
CCM done
Gamma done
CFA done
Stats done
Noise done
Enhance done
Initializing iPipe cores ... done!
Configure ZC702 IIC Mux for Port 1 (HDMI) ...
ZC702 HDMI Output Initialization ...
web avnet console : IN(/tmp/zvik_camera_linux_pipe_req) OUT(/tmp/zvik_camera_linux_pipe_rsp)
access(PIPE_IN_NAME, F_OK) ...done
access(PIPE_OUT_NAME, F_OK) ...done
open(PIPE_IN_NAME, O_RDONLY | O_NONBLOCK ) ...done
[web_session_handler] ... started
```

```
-------------------------------------------------------
--    Xilinx Zynq-7000 AP SoC Video and Imaging Kit    --
--      1080P60 Real-Time Camera Demonstration      --
-------------------------------------------------------
General Commands:
        help       Print the Top-Level menu Help Screen
        quit       Exit console (if applicable)
        verbose    Toggle verbosity on/off
        delay      Wait for specified delay
        mem        Memory accesses
I2C Commands
        iic0       IIC accesses on FMC-IPMI I2C chain
        iic1       IIC accesses on FMC-IMAGEON I2C chain
VITA Commands
        vita       VITA commands (init, status, ...)
        vspi       SPI accesses to VITA sensor
        vreg       Memory accesses to VITA receiver
        again      Analog gain (0-10)
        dgain      Digital gain (0-4095) where 128 corresponds to 1.00
        exposure   Exposure time (1-99) in percentage of frame period (16.66 msec)
iPIPE Commands
        dpc        Defect Pixel Correction configuration
        cfa        Color Filter Array Interpolation configuration
        stats|s    Image Statistics
          awb      Auto White Balance (on|off)
          agc      Auto Gain Control (on|off)
          aec      Auto Exposure Control (on|off)
          geq      Gamma Equalization (on|off)
        noise      Noise Reduction configuration
        enhance    Image Enhance configuration
        ccm        Color Correction Matrix configuration
        gamma      Gamma Correction configuration
Video Source Selection
        video      Video Source Initialization and Selection (vita, ipipe)
Video Frame Buffer Commands
        vdma       Control frame buffer (start/stop/fill)
        rec        Save frame buffer image to BMP file
        play       Fill frame buffer image from BMP file

-------------------------------------------------------

zvik_camera>
```

Adjusting the Lens

The content captured by the image sensor and processed by the image processing pipeline should be visible on the monitor. If the image is blurry, adjust the lens focus, which ranges from 1 cm to 150 cm. If the image is too dark or too light, adjust the aperture (Figure 15). If the image is black, the aperture should be adjusted to allow more light to enter the image sensor.

Figure 15: **Adjusting the Focus and Aperture**

To adjust the focus, aperture, or both:

1. Unlock the set screws by loosening them on both the aperture and focus ring.
2. Twist until the desired result is achieved.
3. Lock the setting by tightening the set screw.

This kit includes an 8 mm lens that is appropriate for a broad range of video applications. If this lens is incorrect for a specific application, determine the required field of view (FOV) using these measurements:

- Distance to object (L)
- Size of object (H x V)

The FOV measurements are shown in Figure 16.

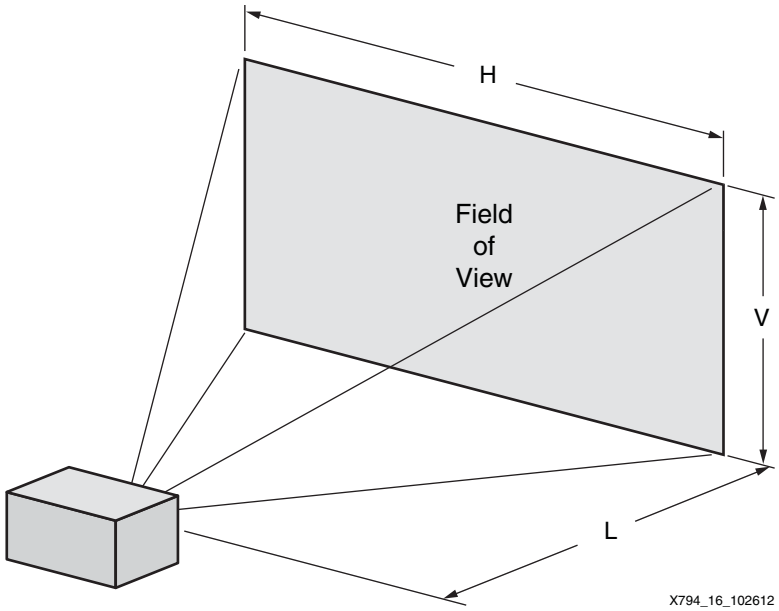

Figure 16: **Determining the Required Field of View (FOV)**

A lens calculator (such as http://www.1stvision.com/lens/lens_calculator.htm) can determine the FOV and, consequently, the ideal lens choice for a specific application.

Using the Text-based Console

The Linux camera demonstration application accepts commands from a text-based console. Type the **help** command to list the supported commands. The Linux application also has a web-based GUI that significantly improves the ease-of-use and is described in Using the Web-based GUI.

```
zvik_camera>help

------------------------------------------------------
--    Xilinx Zynq-7000 AP SoC Video and Imaging Kit    --
--      1080P60 Real-Time Camera Demonstration      --
------------------------------------------------------
General Commands:
        help       Print the Top-Level menu Help Screen
        quit       Exit console (if applicable)
        verbose    Toggle verbosity on/off
        delay      Wait for specified delay
        mem        Memory accesses
I2C Commands
        iic0       IIC accesses on FMC-IPMI I2C chain
        iic1       IIC accesses on FMC-IMAGEON I2C chain
VITA Commands
        vita       VITA commands (init, status, ...)
        vspi       SPI accesses to VITA sensor
        vreg       Memory accesses to VITA receiver
        trig       Trigger configuration (off/stress/internal/external/manual)
iPIPE Commands
        dpc        Defect Pixel Correction configuration
        cfa        Color Filter Array Interpolation configuration
        stats|s    Image Statistics
          awb      Auto White Balance (on|off)
          agc      Auto Gain Control (on|off)
```

```
          aec       Auto Exposure Control (on|off)
          geq       Gamma Equalization (on|off)
        irq|i       Image Statistics Interrupt (manual)
        noise       Noise Reduction configuration
        enhance     Image Enhance configuration
        ccm         Color Correction Matrix configuration
        gamma       Gamma Correction configuration
Video Source Selection
        video       Video Initialization (hdmi, hdmii, hdmio, vita)
Record/Playback Commands
        rec         Save frame buffer image to BMP file
        play        Fill frame buffer image from BMP file

------------------------------------------------------

zvik_camera>
```

Type the **{command} help** command to obtain detailed help for a specific command. For example, to save an image from the video frame buffer to the SD card (`/mnt`), type these commands:

```
zvik_camera>rec help
rec help

        Syntax :
                rec {filename} => Write frame buffer image to BMP file

zvik_camera>rec /mnt/mypicture.bmp
rec /mnt/mypicture.bmp

        height = 1080, width = 1920, n = 6220800

zvik_camera>
```

Using the Web-based GUI

To access the web-based GUI, open a web browser such as Internet Explorer and enter the ZVIK IP address http://192.168.1.10 (or the address assigned in Preparing the SD Card). The web page shown in Figure 17 appears.

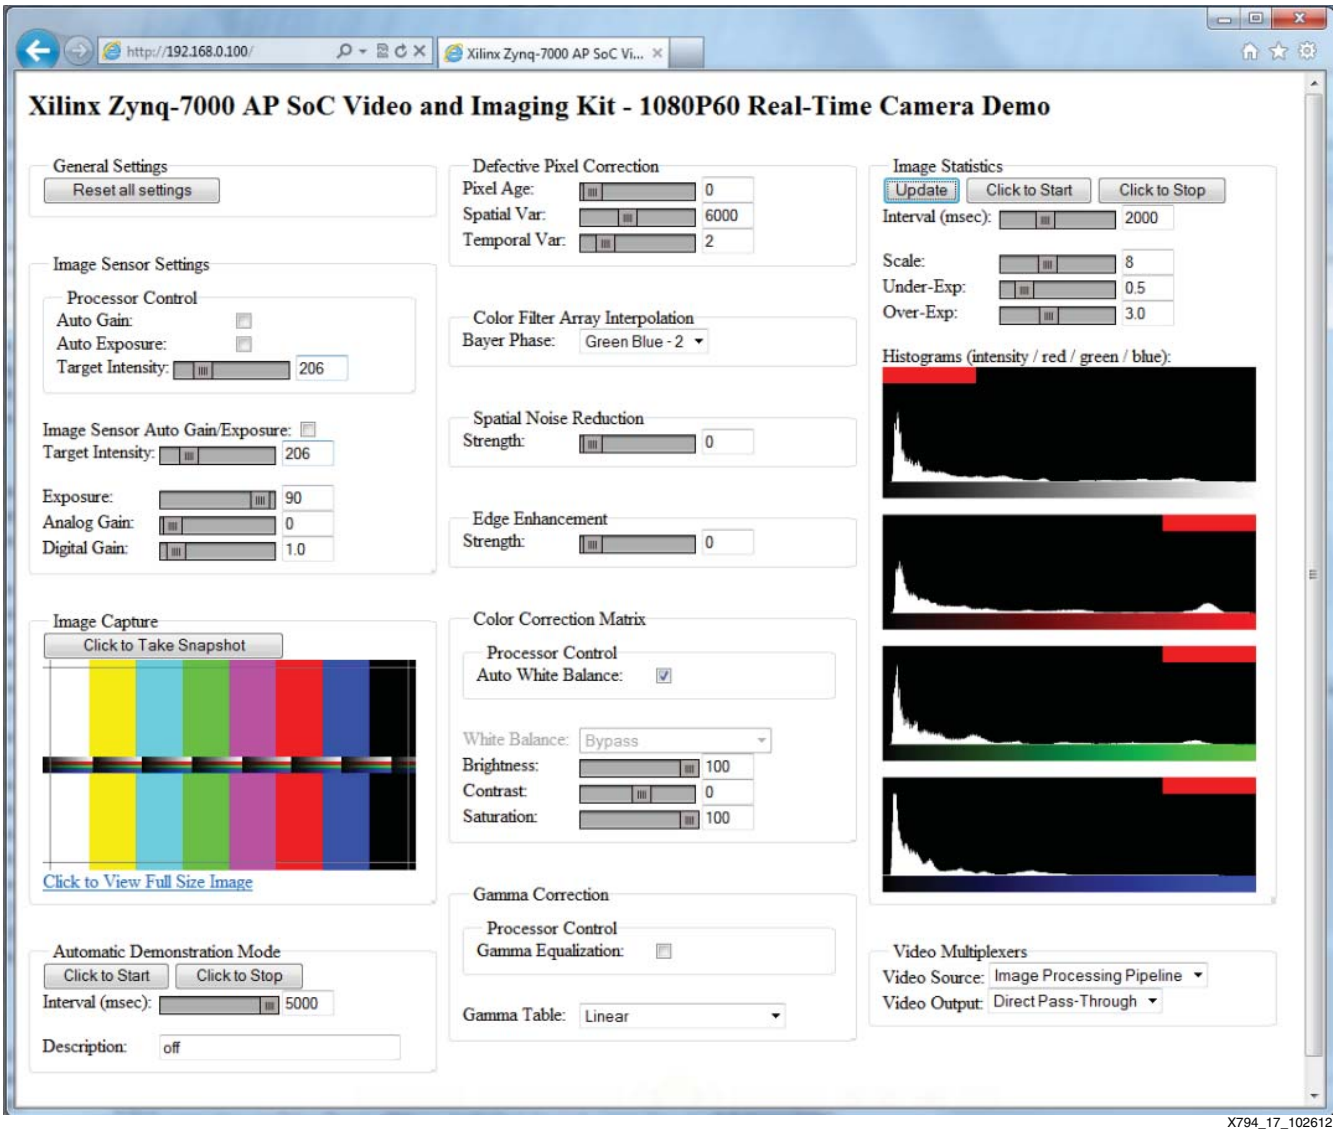

Figure 17: **1080p60 Camera Design Web-based GUI**

If the host computer cannot establish a connection, it might be necessary to disable virus scanning, the firewall, or both. This is not typically required. To test whether the computer can communicate over the Ethernet connection, open a Command Prompt window (this is done in Windows 7 by selecting **Start Button > All Programs > Accessories > Command Prompt**) and type **`ping 192.168.1.10`** or **`ping`** followed by the IP address assigned to the ZVIK in the previous section. If this is not successful, review the IP configurations set in Preparing the SD Card and Configuring the Host IP Address.

Adjusting the Image Sensor Gain and Exposure

The image sensor gain and exposure can be adjusted using the controls shown in Figure 18.

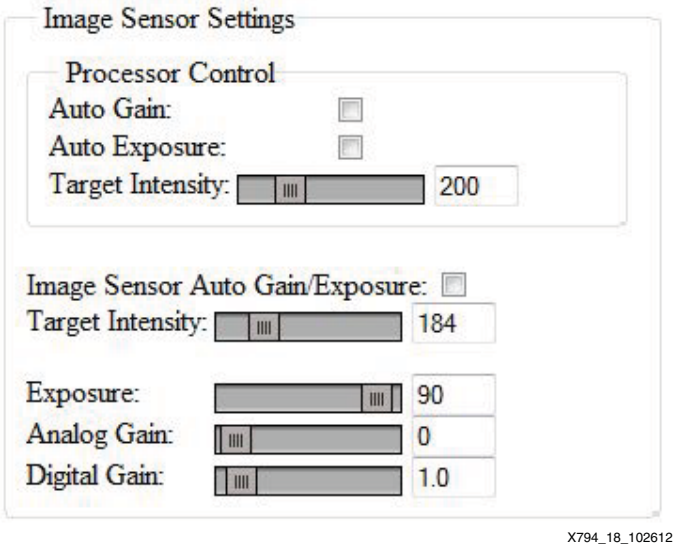

Figure 18: **Image Sensor Gain and Exposure Controls**

The check boxes shown in Figure 18 allow the gain and exposure to be adjusted automatically by either of these two methods:

- Processor Control: One of the Zynq-7000 SoC processors collects information about the image from the Image Statistics IP core and uses this information to adjust the image sensor exposure and gain settings. The Target Intensity slider allows the user to select the desired target intensity.
- Image Sensor Auto Gain/Exposure: Uses the image sensor internal auto gain/exposure control (AEC) to control the gain and exposure. The Target Intensity slider allows the user to select the desired target intensity.

Note: When the processor control boxes are checked, they disable both the manual gain and exposure settings and the image sensor AEC.

Sliders allow the gain and exposure to be adjusted manually when the auto gain and exposure check boxes are not selected.

The analog gain provides a course manual adjustment of the image sensor gain, as shown in Table 2.

Table 2: **Analog Gain Slider Settings**

Setting	Description
0	Analog gain = 0.00
1	Analog gain = 1.14
2	Analog gain = 1.33
3	Analog gain = 1.60
4	Analog gain = 2.00
5	Analog gain = 2.29
6	Analog gain = 2.67
7	Analog gain = 3.20
8	Analog gain = 4.00
9	Analog gain = 5.33
10	Analog gain = 8.00

The digital gain slider provides a fine manual adjustment of the image sensor gain, as shown in Table 3.

Table 3: **Digital Gain Slider Settings**

Setting	Description
0.00–31.99	Digital gain = 0.00–31.99

The exposure slider provides a manual adjustment of the image sensor exposure time, as shown in Table 4.

Table 4: **Exposure Slider Settings**

Setting	Description
1 – 99	Exposure in percentage of frame time (16.6 ms): 1% = 0.16 ms 99% = 16.5 ms

Capturing a 1080P Image

The Image Capture section of the web-based GUI allows capturing an image from the video frame buffer, as shown in Figure 19.

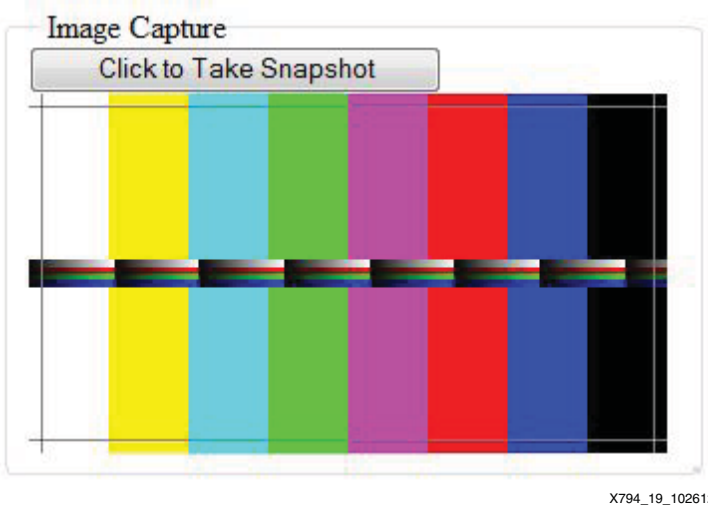

Figure 19: **Image Capture Controls**

After clicking the **Click to Take Snapshot** button, a scaled-down version of the image is displayed in the GUI. A full-size version of the image (24-bit RGB 1920 x 1080 bitmap (BMP)) can be saved to the host hard drive by right-clicking the image and selecting **Save Picture As**. This allows analysis of the image with a separate image viewing program.

Configuring the Defective Pixel Correction

The Xilinx Defective Pixel Correction IP core can be configured with three sliders, as shown in Figure 20.

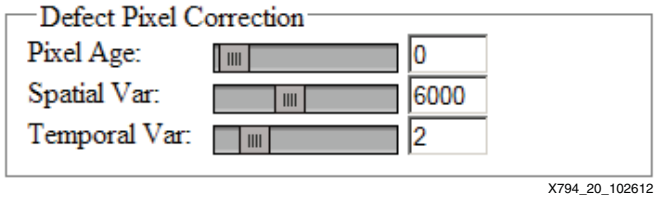

Figure 20: **Defective Pixel Correction IP Core Controls**

To observe the operation of the Defective Pixel Correction core, move the Pixel Age slider to 100. A few small white dots appear on the monitor. To better see the dots, point the image sensor at a uniform dark background. These are defective pixels in the image sensor. As the Pixel Age Slider is moved back to 0, the defective pixels are effectively removed from the image by the Defective Pixel IP core processing.

Configuring the Color Filter Array Interpolation

The Xilinx Color Filter Array Interpolation IP core Bayer Phase setting (Figure 21) can be changed, but only one setting produces a valid result with the VITA 2000 image sensor.

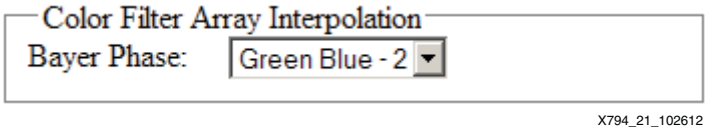

Figure 21: **Color Filter Array IP Core Control**

Configuring the Spatial Noise Reduction

The Xilinx Image Noise Reduction IP core performs spatial noise reduction using a low-pass filter that is edge adaptive. The Strength slider shown in Figure 22 allows the settings shown in Table 5.

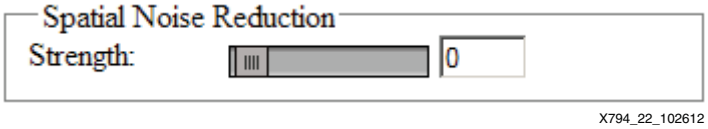

Figure 22: **Image Noise Reduction IP Core Control**

Table 5: **Spatial Noise Reduction Strength Settings**

Setting	Description
0	Spatial Noise Reduction OFF.
1–4	Spatial Noise Reduction ON. Number identifies strength of spatial noise reduction filter.

Configuring the Edge Enhancement

The Xilinx Image Edge Enhancement IP core performs edge detection and highlights the edges in the color image. The Strength slider shown in Figure 23 allows the settings shown in Table 6. The best image quality is usually achieved with a value of **1**.

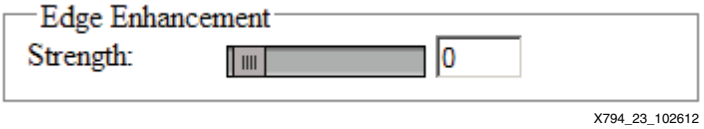

Figure 23: **Image Edge Enhancement IP Core Control**

Table 6: **Edge Enhancement Settings**

Setting	Description
0	Edge Enhancement OFF
1-4	Edge Enhancement ON Number identifies strength of edge enhancement

Configuring the Color Correction Matrix

The Xilinx Color Correction Matrix IP core provides color correction of the image to correct for different illumination sources. The Color Correction IP core settings can be adjusted using the GUI controls shown in Figure 24.

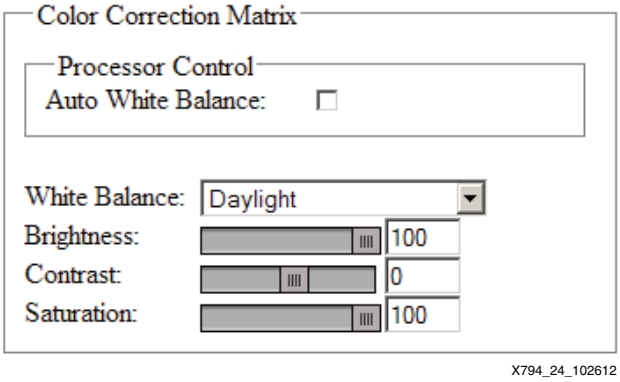

Figure 24: **Color Correction Matrix IP Core Controls**

The white balance list box applies pre-determined color corrections for four illumination conditions, as shown in Table 7.

Table 7: **White Balance Settings**

Setting	Description
Bypass	Color correction OFF (all coefficients are 1.0)
Daylight	Color correction ON for daylight lighting conditions
Cool White Fluorescent	Color correction ON for cool white fluorescent (4500°K) lighting
U30 (Hot Fluorescent)	Color correction ON for hot fluorescent (3000°K) lighting
Incandescent	Color correction ON for incandescent lighting

Alternatively, the white balance setting can be automatically controlled by one of the Zynq-7000 SoC processors. Based on the information received from the Image Statistics IP core, the processor can select a weighted sum of one or more of the white balance configurations, based on the calculated probability of each of the possible light sources.

The Brightness and Contrast sliders can be used to change the intensity of the image, making it darker or brighter.

The Saturation slider can be used to change the intensity of the colors. A Saturation of 0 produces a grayscale image.

The color correction coefficients for the four illumination sources were generated by placing an X-Rite ColorChecker 24 Patch Classic target [Ref 40] in an X-Rite Macbeth Judge II light booth [Ref 41]. Bitmap images were collected using the GUI for the four different illumination settings (Daylight, Cool White Fluorescent, U30, and Incandescent sources) with the color correction matrix set to **Bypass** (no color corrections applied). Average values for the 24 patches at each illumination setting were calculated by a MATLAB® software script. A second script is used to model the Xilinx color correction matrix operations and determine a set of coefficients that result in output from the color correction matrix that best matches the known target values for the 24 patches. The MATLAB software scripts used to develop the coefficients for the Color Correction Matrix IP core are included in the 1080p60 camera image processing design files that can be downloaded from the ZVIK product page on Xilinx.com. Select the **Docs and Designs** tab and look for the `ZVIK_Camera_Design_14_2.zip` download. Additional

information on development of the color correction coefficients can be found in an article titled *Image Sensor Color Calibration Using the Zynq-7000 SoC* in the *Xcell Journal* [Ref 2].

Figure 25 illustrates the effects of white balance on the 24-patch ColorChecker chart for the four different illumination sources:

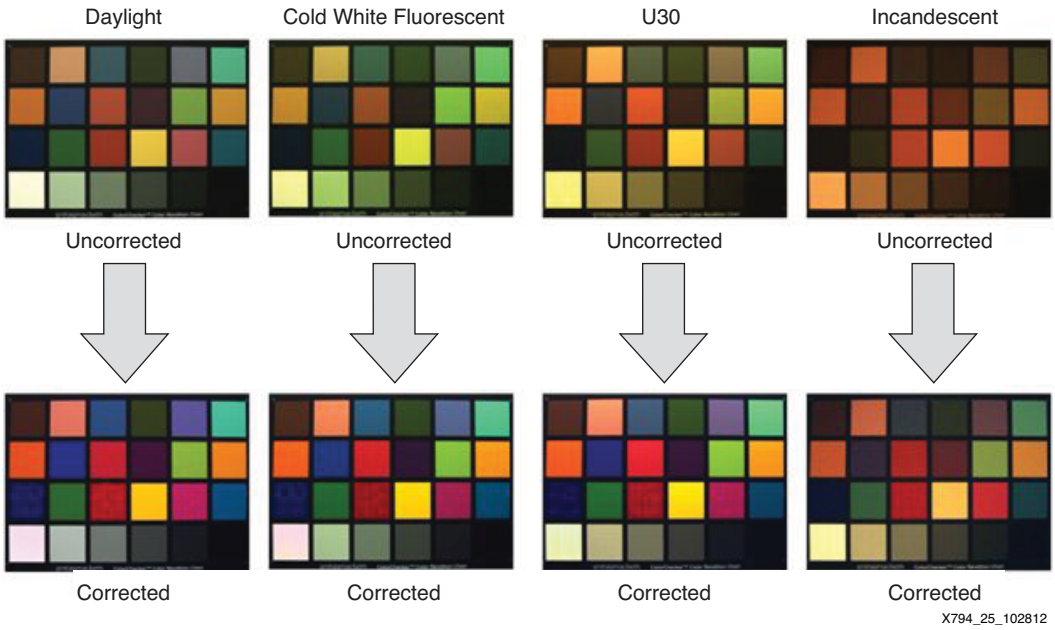

Figure 25: **White Balance Color Checker Results**

The top four images show the output of the image sensor and image processing pipeline with no color correction applied for four different illumination sources. There are marked differences in color for all four cases. The bottom images show the output with the various color corrections applied for each different illumination source and illustrate how the white balance setting corrects the colors. These images were taken in the X-Rite Macbeth Judge II light booth using the ZVIK camera design.

Xilinx provides support for the 1080p60 camera image processing reference design, IP cores such as the Color Correction Matrix, and Xilinx FPGA and SoC products. Xilinx cannot provide assistance to customers developing color correction coefficients for the ON Semiconductor or any other image sensor. Development of custom color correction coefficients is the responsibility of the customer. The MATLAB software scripts are provided as examples to assist customers in developing their own color corrections for different image sensors. Consult the Additional Resources tab of the ZVIK product page for additional information.

Configuring the Gamma Correction

The gamma correction IP core is implemented as a look-up table that is applied to all three color channels. The gamma correction IP core can be adjusted using the GUI controls shown in Figure 26.

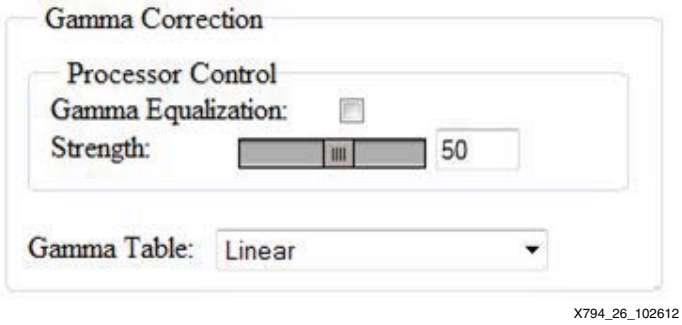

Figure 26: **Gamma Correction IP Core Controls**

The Gamma Table list box allows the manual gamma correction settings shown in Table 8.

Table 8: **Gamma Table Setting**

Setting	Description
Linear	Gamma Correction OFF (linear look-up table)
Compression Table 1/2.2	Gamma Correction ON (gamma = 1/2.2)
Compression Table 1/1.6	Gamma Correction ON (gamma = 1/1.6)
Expansion Table 1.6	Gamma Correction ON (gamma = 1/1.6)
Expansion Table 2.2	Gamma Correction ON (gamma = 1/2.2)

Alternatively, the gamma correction setting can be automatically controlled by one of the Zynq-7000 SoC processors. Based on the information received from the image statistics IP core, the processor can calculate a look-up table that makes the most efficient use of the 0–255 values based on the image intensity histogram. The strength slider allows the user to adjust the gamma correction strength applied by the processor.

Understanding the Image Statistics

The Xilinx Image Statistics IP core provides hardware-based image analysis to support auto-focus, auto-exposure, and auto-white balance applications. The third column in the web-based GUI provides feedback from the image statistics IP core in the form of histograms, as shown in Figure 27.

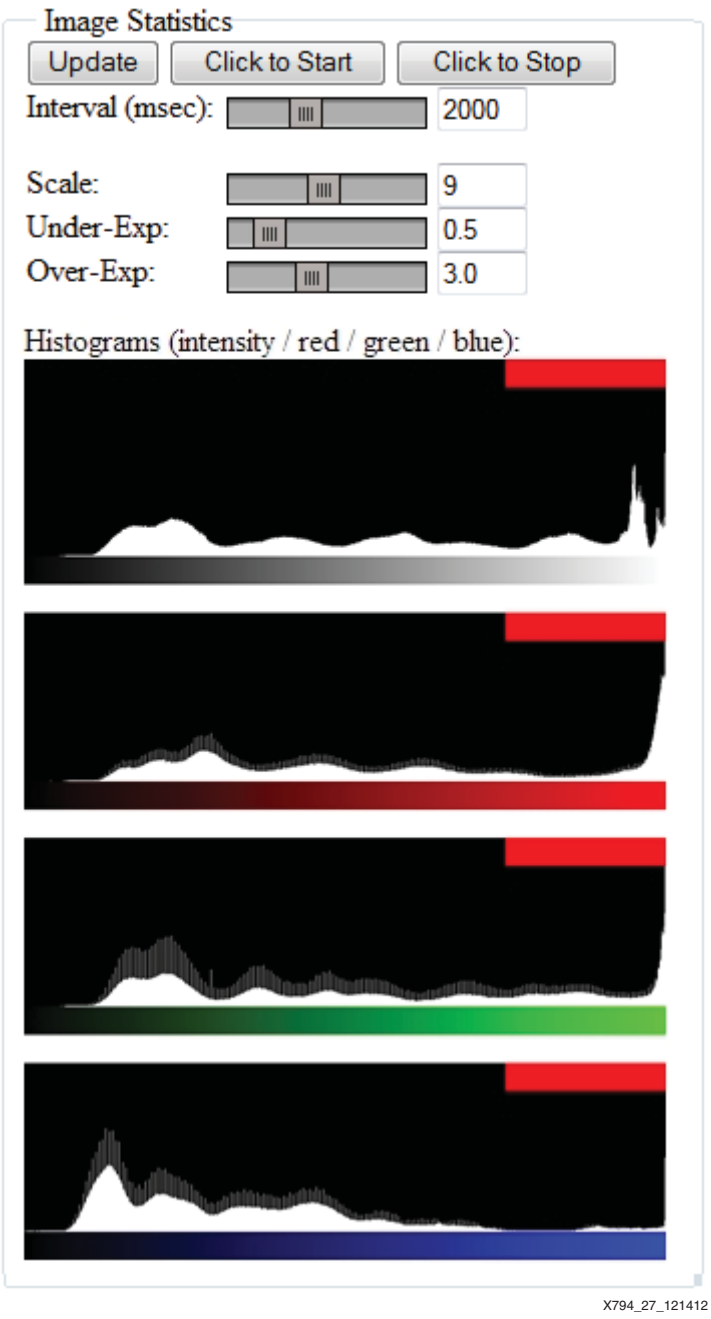

Figure 27: **Histograms from the Xilinx Image Statistics IP Core**

Four histograms are displayed. The content of each histogram is described by the color bar at the bottom of each histogram. The intensity histogram has a gray color bar, the red channel histogram has a red color bar, the green histogram has a green bar, and the blue histogram has a blue bar.

The intensity histogram (Figure 28) provides information about the overall image exposure.

Figure 28: **Intensity Histogram**

In addition to the histogram distribution of the data, the bar at the top of the histogram provides visual feedback on the exposure:

- A red bar on the top left indicates that the image is under-exposed according to the formula:

  (number of pixels in the 0–64 range) * (under-exposure threshold) > (number of pixels in the 64–192 range)
- A red bar on the top right indicates that the image is over-exposed according to the this formula:

  (number of pixels in the 192–255 range) * (over-exposure threshold) > (number of pixels in the 64–192 range)
- A green bar on the top indicates that the image has good exposure (neither under-exposed or over-exposed)

The under- and over-exposure thresholds can be adjusted by moving the Under-Exp and Over-Exp sliders at the top of the third column, as shown in Figure 29.

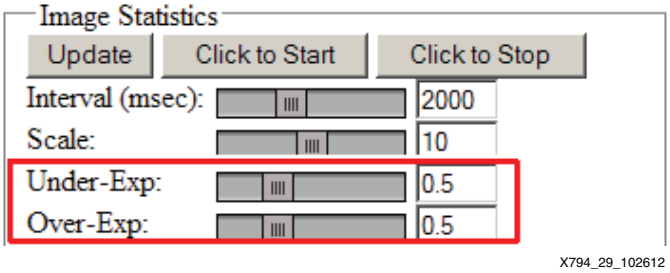

Figure 29: **Image Statistics Exposure Controls**

The red histogram (Figure 30) shows the distribution of red pixel values.

Figure 30: **Red Histogram**

- A red bar on the top right indicates that the red color channel is over-saturated according to the formula:

  (number of pixels in the 242–255 range) > 0
- A green bar on the top indicates that the red color channel is not over-saturated.

The green histogram (Figure 31) shows the distribution of green pixel values.

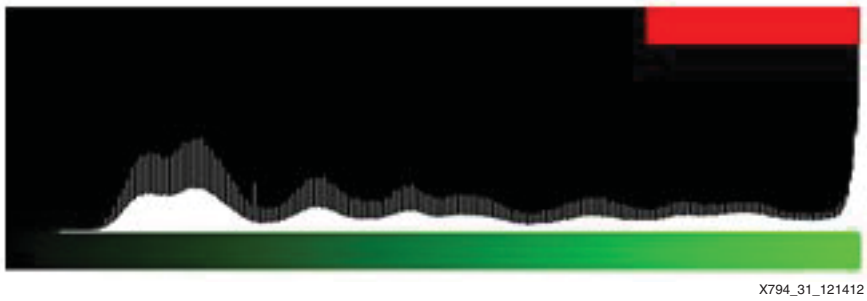

Figure 31: **Green Histogram**

- A red bar on the top right indicates that the green color channel is over-saturated according to the formula:

  (number of pixels in the 242–255 range) > 0
- A green bar on the top indicates that the green color channel is not over-saturated.

The blue histogram (Figure 32) shows the distribution of blue pixel values.

Figure 32: **Blue Histogram**

- A red bar on the top right indicates that the blue color channel is over-saturated according to the formula:

  (number of pixels in the 242–255 range) > 0

- A green bar on the top indicates that the blue color channel is not over-saturated.

The contents of the histograms are static by default, unless configured otherwise. There are two options for updating the histograms (see Figure 29):

1. To update the contents of the histograms a single time, click the **Update** button.
2. To periodically update the histograms, click the **Click to Start** button. To stop periodically updating the histograms, click the **Click to Stop** button. The frequency of the update can be adjusted by moving the **Interval (msec)** slider.

Hardware Platform

The block diagram for the 1080p60 camera reference design is shown in Figure 33.

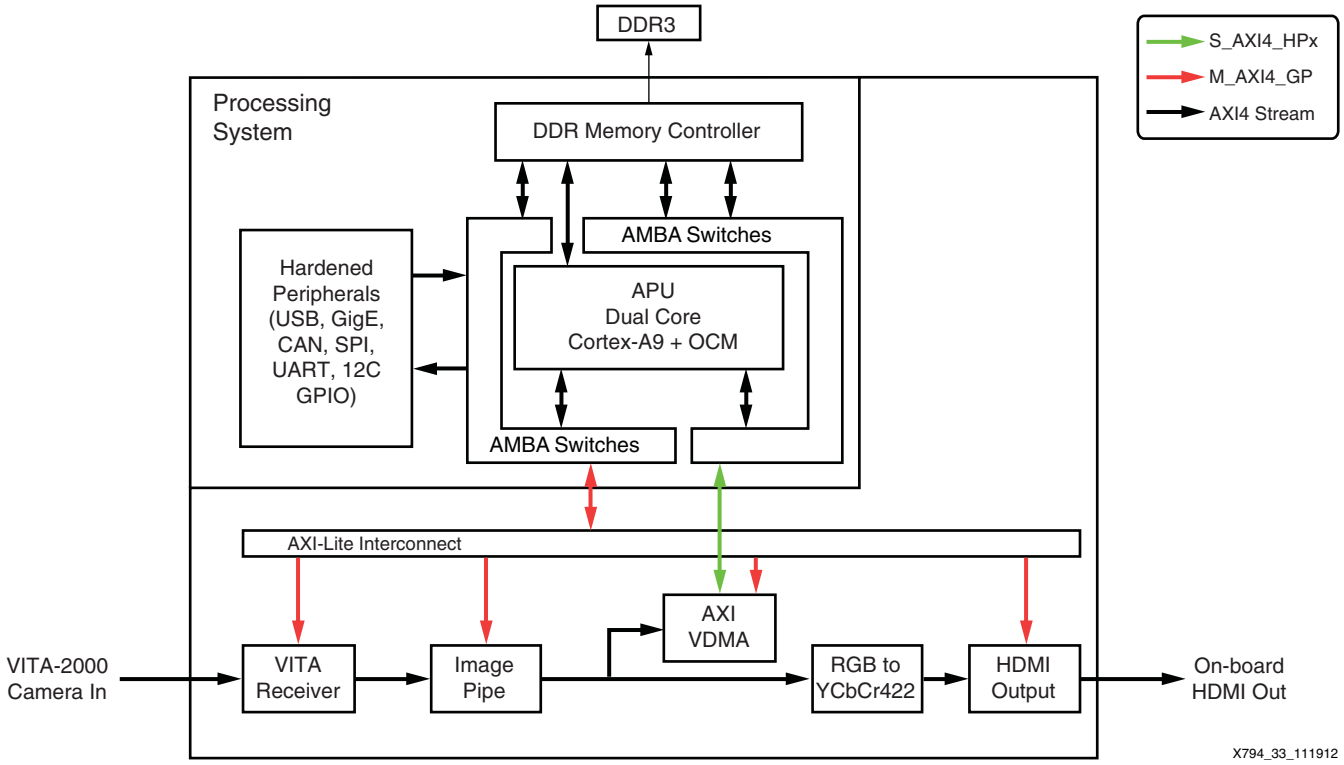

Figure 33: **1080p Camera Hardware Block Diagram**

The details of the image processing pipeline are shown in Figure 34.

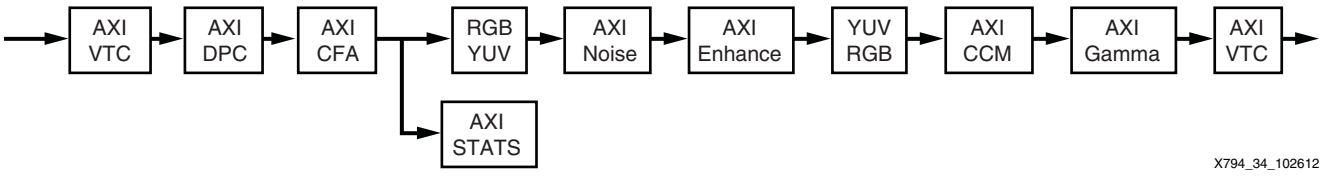

Figure 34: **1080p Camera Image Processing Pipeline**

This design is implemented in a Zynq-7000 AP SoC device (XC7Z020CLG484-1) using the ISE Design Suite: Embedded Edition 14.2. The PL hardware utilization for the implemented design is shown in Table 9.

Table 9: **Hardware Utilization**

FPGA Components	Total Available	Used	% Used
I/Os	200	50	25
LUTs	53,200	29,708	55
Registers	106,400	36,255	34
DSP48s	220	54	24
Block RAM			
RAMB36E1/FIFO36E1s	140	48	34
RAMB18E1/FIFO18E1s	280	26	9

A more detailed resource utilization summary can be found in this directory:

```
..\zvik_camera\doc\system_summary.html
```

Note: Device resource utilization results are dependent on the implementation tool versions. Exact results can vary. These numbers should be used as a guideline.

There are many advantages to implementing this system in a Zynq-7000 AP SoC:

- Processing-intensive pixel operations are efficiently implemented in the PL.
- Complex decision-making algorithms like automatic white balance and automatic exposure are efficiently implemented in the PS.
- Processor operations can easily be modified or added to the PS.
- The hardware system can easily be expanded or customized by adding/removing instances of Xilinx IP cores from the Xilinx IP catalog or third-party sources.
- The hardware system can be further customized by adding custom logic that either interfaces to the PS or is totally independent.
- A choice of Zynq-7000 AP SoC sizes allows room to shrink or expand the hardware PL to meet system requirements.

System Features

Processing System

- Two ARM Cortex™-A9 processors, each with a 32 KB instruction cache and a 32 KB data cache, and a NEON coprocessor
- ARM processors at 800 MHz
- 512 KB of level-2 cache
- 256 KB of on-chip RAM
- 128 KB of on-chip ROM
- AMBA® AXI interconnect
- Multi-protocol, 32-bit DDR DRAM controller
- DDR3 DRAM at 533 MHz
- Standard peripheral interfaces including flash, USB, Ethernet, UART, I2C, and more
- High bandwidth interconnect to and from the PL
- Power domain independent of the PL

Programmable Logic

- One 64-bit AXI interconnect at 150 MHz
- Two 32-bit AXI interconnect at 75 MHz
- VITA receiver (serial LVDS) interface
- Image processing pipeline
- Video frame buffer (AXI-VDMA)
- HDMI output interface

Device Address Map

The pcores that are instantiated on the M_AXI_GP0 port are shown in Table 10.

Table 10: **AXI GP0 Port Address Map**

Instance	Peripheral	Base Address	High Address
axi_vdma_0	axi_vdma_v5_00_a	0x40090000	0x4009FFFF
IIC_MAIN	axi_iic_v1_01_a	0x40800000	0x4080FFFF
fmc_imageon_iic_0	axi_iic_v1_01_a	0x40900000	0x4090FFFF
fmc_imageon_vita_receiver_0	fmc_imageon_vita_receiver_v1_09_a	0x40820000	0x4082FFFF
axi_vtc_2	axi_vtc_v3_00_a	0x40440000	0x4044FFFF
xsvi_mux_0	xsvi_mux_v1_00_b	0x40600000	0x4060FFFF
xsvi_mux_1	xsvi_mux_v1_00_b	0x40610000	0x4061FFFF
vtc_0	axi_vtc_v3_00_a	0x7DE20000	0x7DE2FFFF
dpc_0	axi_dpc_v4_00_a	0x75000000	0x7500FFFF
cfa_0	axi_cfa_v4_00_a	0x64C00000	0x64C0FFFF
stats_0	axi_stats_v3_00_a	0x6CE00000	0x6CE0FFFF
noise_0	axi_noise_v3_00_a	0x76000000	0x7600FFFF
enhance_0	axi_enhance_v3_00_a	0x7B200000	0x7B20FFFF
ccm_0	axi_ccm_v3_00_a	0x64C20000	0x64C2FFFF
gamma_0	axi_gamma_v4_00_a	0x6FC00000	0x6FC0FFFF
vtc_1	axi_vtc_v3_00_a	0x7DE00000	0x7DE0FFFF

System Configuration

Clocking

The PL design has several clock domains: AXI MM (memory-mapped) interconnect, AXI register interface, and video clock(s). These domains run at 150 MHz, 75 MHz, and 148.5 MHz, respectively.

The first clock generator module receives a 100 MHz input clock from PS FCLK0 and generates 75 MHz and 150 MHz. The AXI4-Lite interconnect operates on the 75 MHz clock domain.

The AXI MM interconnect to the HP port of the PS operates on the 150 MHz clock domain. The stream to memory map (S2MM) and memory map to stream (MM2S) channels of the VDMA operate on the 150 MHz clock domain.

The video clock comes from the external clock synthesizer on the Avnet FMC-IMAGEON card. The video input and output interfaces, as well as the video processing pipeline operate on the video clock domain.

The clock signals are shown in Table 11.

Table 11: **System Clocks**

Clock Signal	Source	Frequency (MHz)	Use
FPGA_CLK	PS – FPGA_CLK0	100	Input clock to clock generator.
clk_100mhz	Clock generator – MMCM(1)	100	Not used.
clk_200mhz	Clock generator – MMCM	200	200 MHz reference clock for deserializer in VITA receiver.
clk_75mhz	Clock generator – MMCM	75	Slave clock for AXI4-Lite interconnect.
clk_150mhz	Clock generator – MMCM	150	Clock for AXI MM interconnect.
clk_25mhz	Clock generator – MMCM	25	Slowest sync clock, used for reset logic.
fmc_imageon_video_clk1	External video clock coming from clock synthesizer on FMC module	148.5	Input clock to clock generator.
vid_out_clk	Clock generator – MMCM	148.5	Clock for video input and video output interfaces and video processing pipeline.
vita_clk_ref	Clock generator – MMCM	37.125	Reference clock for VITA image sensor.

Notes:

1. Mixed-mode clock manager.

Reset

The proc_sys_reset module implements a reset scheme. Input to the proc_sys_reset core is generated by PS FCLK_RESET0. The polarity of input reset to this block is indicated by the parameter C_EXT_RESET_HIGH. In this design, C_EXT_RESET_HIGH is set to 0 because the reset generated by the PS is active-Low. This block generates various types of resets, such as reset for interconnect and peripheral reset. All the blocks in the PL are driven by interconnect reset, which is active-Low.

For detailed information about the complete feature set and a functional description of the proc_sys_reset IP core, refer to *LogiCORE IP Processor System Reset Module Product Specification* [Ref 4].

AXI Interconnect

The PL design has one interconnect for the AXI memory-mapped master and one interconnect for the AXI register interface.

The AXI memory-mapped interconnect is connected to a master, the AXI VDMA. It is also connected to a slave, the HP0 port of the Zynq-7000 AP SoC PS. This interconnect operates at 150 MHz, and the data width is 64 bits. The read/write acceptance and issuance are set to 8. The acceptance and issuance helps improve system performance. The PS HP port can accept a maximum burst length of 16.

This read/write acceptance and issuance setting imposes a limitation on getting minimum acceptable bandwidth for every master in a multi-master system. The optimum setting of issuance and acceptance reduces throttle on the bus and compensates for long latencies.

The AXI register interface is clocked at 75 MHz. The Zynq-7000 AP SoC PS GP0 port acts as the master on this interconnect and connected slaves have register maps. AXI TPG and AXI VTC are examples of slaves connected to this interconnect. The operations of the video

pipeline are controlled by registers inside every IP core. Depending upon the data flow required in the video pipeline, the processor writes these registers through the AXI4-Lite interconnect. The AXI4-Lite interconnect accepts write or read transfers from the processor, performs address decoding, selects a particular slave, and establishes a communication channel between the processor and the slave device.

For detailed information about the complete feature set and a functional description of the AXI interconnect IP, refer to *LogiCORE IP AXI Interconnect* [Ref 5].

Video System Configuration

AXI VDMA

AXI VDMA has an AXI4-Stream interface on one side and an AXI memory-mapped interface on the other side. The AXI VDMA has two channels: MM2S and S2MM. The MM2S channel is not implemented in this design.

The S2MM channel receives data from the master device connected through the streaming interface. The C_S_AXIS_S2MM_TDATA_WIDTH parameter decides the width of the streaming interface. Data received on the streaming interface is then written into the system memory through the memory-mapped interface. The C_M_AXI_S2MM_DATA_WIDTH parameter decides the data width of the memory-mapped interface and C_S2MM_MAX_BURST_LENGTH governs the burst length of the write transaction.

In this design, the stream interface data width is set to 32 bits and the memory-mapped interface width is 64 bits. The AXI VDMA is used in simple register direct mode, which removes the area cost of the scatter gather feature. Initialization, status, and management registers in the AXI VDMA core are accessed through an AXI4-Lite slave interface. To get the best possible throughput for AXI VDMA instances, the maximum burst length is set to 16. In addition, the master interfaces have a read and write issuance of 8 and a read and write FIFO depth of 512 to maximize throughput. The line buffers inside the AXI VDMA for the read and write sides are set to 4K deep, and the store and forward feature of the AXI VDMA are enabled on both channels to improve system performance and reduce the risk of system throttling.

For additional information about the AXI VDMA LogiCORE solution and the detailed product guide, refer to the AXI VDMA product page on Xilinx.com:

http://www.xilinx.com/products/intellectual-property/axi_video_dma.htm

Video Processing Pipeline Details

Video Timing Controller

The AXI Video Timing Controller (VTC) is a general-purpose video timing generator and detector. The input side of this core automatically detects horizontal and vertical synchronization pulses, polarity, blanking timing, and active video pixels. The output side of the core generates the horizontal and vertical blanking and synchronization pulses. There are two AXI VTC cores in the image processing pipeline, as shown in Figure 35.

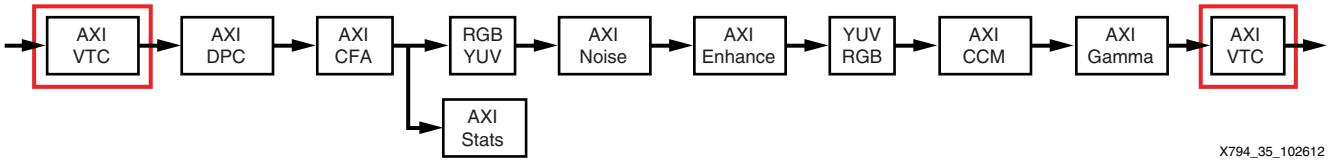

Figure 35: **AXI VTC Core Pipeline Position**

The first AXI VTC core detects the video resolution of the video input coming from the VITA receiver. The second AXI VTC core is used to regenerate the VSYNC and HSYNC signals that were not preserved by the image processing pipeline.

For additional information about the Video Timing Controller LogiCORE solution and the detailed product guide, refer to the Video Timing Controller product page on Xilinx.com:

http://www.xilinx.com/products/intellectual-property/EF-DI-VID-TIMING.htm

Defective Pixel Correction

The AXI Defective Pixel Correction (DPC) core is the first processing element in the image processing pipeline, as shown in Figure 36.

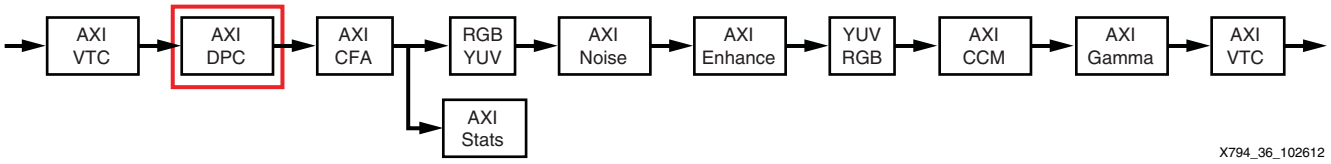

Figure 36: **AXI DPC Core Pipeline Position**

This core is responsible for correcting defective pixels, as illustrated in Figure 37.

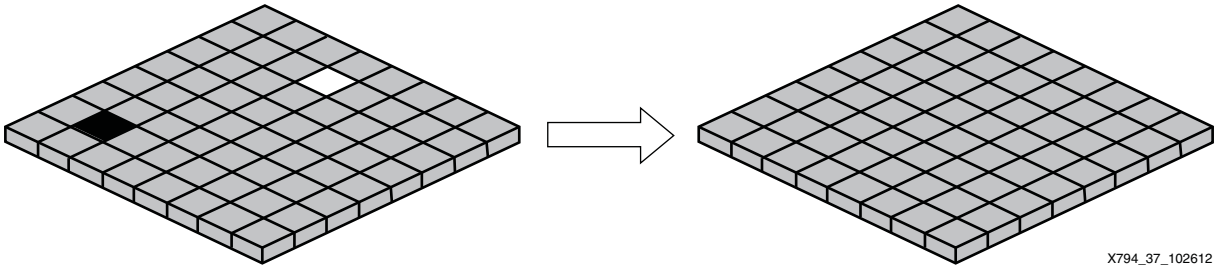

Figure 37: **Defective Pixel Correction**

For additional information about the Defective Pixel Correction LogiCORE solution and the detailed product guide, refer to the Defective Pixel Correction product page on Xilinx.com:

http://www.xilinx.com/products/intellectual-property/EF-DI-DEF-PIX-CORR.htm

Color Filter Array Interpolation

The AXI Color Filter Array (CFA) core is the second processing element in the image processing pipeline, as shown in Figure 38.

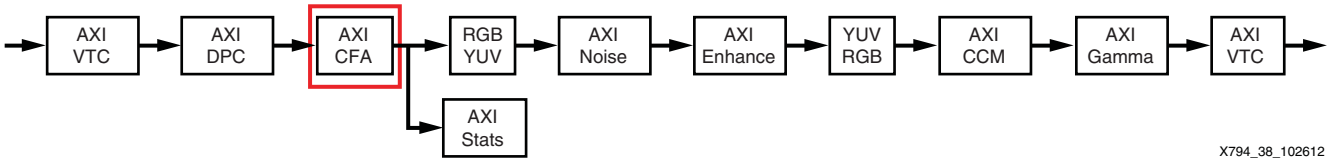

Figure 38: **AXI CFA Core Pipeline Position**

The most widespread and cost effective implementation of color image sensors involves placing color filters on top of each pixel in a Bayer pattern arrangement, as shown in Figure 39.

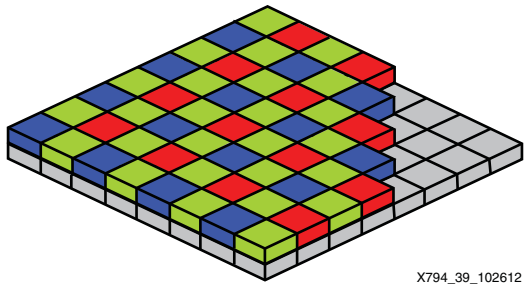

Figure 39: **Bayer Pattern Color Filter**

With this arrangement of color filters, each pixel captures only one of the three primary colors. The CFA core restores the missing two colors based on neighboring pixels.

For additional information about the Color Filter Array Interpolation LogiCORE solution and the detailed product guide, refer to the Color Filter Array Interpolation product page on Xilinx.com:

http://www.xilinx.com/products/intellectual-property/EF-DI-CFA.htm

Image Statistics Engine

The AXI STATS core is used to gather various image statistics from the image processing pipeline (Figure 40) such as:

- Intensity histograms
- Color histograms

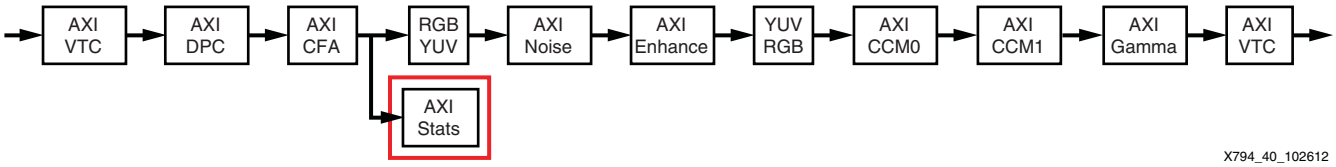

Figure 40: **AXI Stats Core Pipeline Position**

For additional information about the Image Statistics Engine LogiCORE solution and the detailed product guide, refer to the Image Statistics Engine product page on Xilinx.com:

http://www.xilinx.com/products/intellectual-property/EF-DI-IMG-STATS.htm

Color Space Conversion

The color space conversion cores are used in the image processing pipeline to convert to/from the RGB color space and the YCrCb color space, as shown in Figure 41.

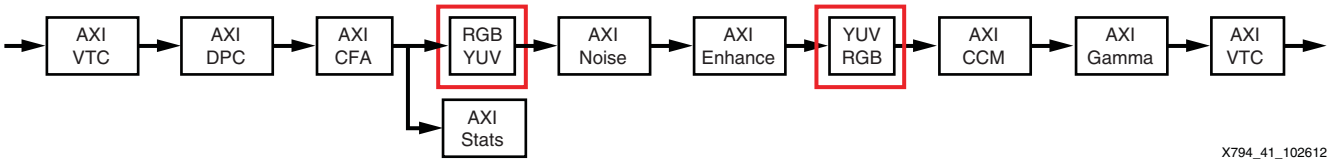

Figure 41: **Color Space Conversion Cores Pipeline Position**

For additional information about the Color Space Conversion LogiCORE solutions and the detailed product guides, refer to the Color Space Conversion product pages on Xilinx.com:

http://www.xilinx.com/products/intellectual-property/RGB_to_YCrCb.htm

http://www.xilinx.com/products/intellectual-property/YCrCb_to_RGB.htm

Image Noise Reduction

The AXI NOISE core is used to remove spatial noise in the image processing pipeline, as shown in Figure 42.

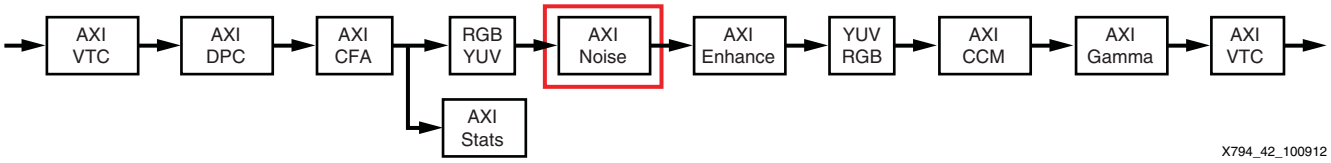

Figure 42: **AXI Noise Core Pipeline Position**

For additional information about the Image Noise Reduction LogiCORE solution and the detailed product guide, refer to the Image Noise Reduction product page on Xilinx.com:

http://www.xilinx.com/products/intellectual-property/EF-DI-IMG-NOISE.htm

Image Edge Enhancement

The AXI ENHANCE core is used to accentuate edges in the image and is positioned in the image processing pipeline, as shown in Figure 43.

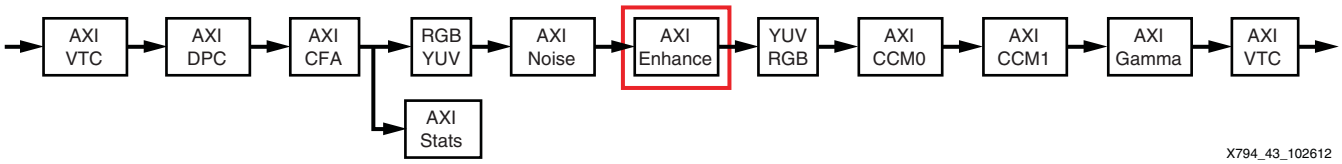

Figure 43: **AXI Enhance Core Pipeline Position**

For additional information about the Image Edge Enhancement LogiCORE solution and the detailed product guide, refer to the Image Edge Enhancement product page on Xilinx.com:

http://www.xilinx.com/products/intellectual-property/EF-DI-IMG-ENHANCE.htm

Color Correction Matrix

The AXI Color Correction Matrix (CCM) core is used to implement various color corrections in the image processing pipeline (Figure 44):

- White balance
- Brightness
- Contrast
- Saturation

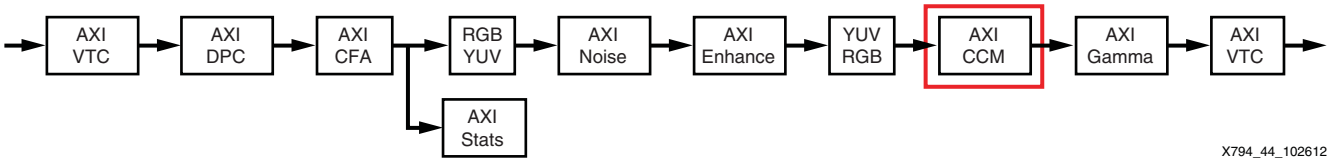

Figure 44: **AXI CCM Core Pipeline Position**

For additional information about the Color Correction Matrix LogiCORE solution and the detailed product guide, refer to the Image Edge Enhancement product page on Xilinx.com:

http://www.xilinx.com/products/intellectual-property/EF-DI-CCM.htm

Gamma Correction

The AXI GAMMA core implements look-up tables that are used to implement gamma correction in the image processing pipeline, as shown in Figure 45.

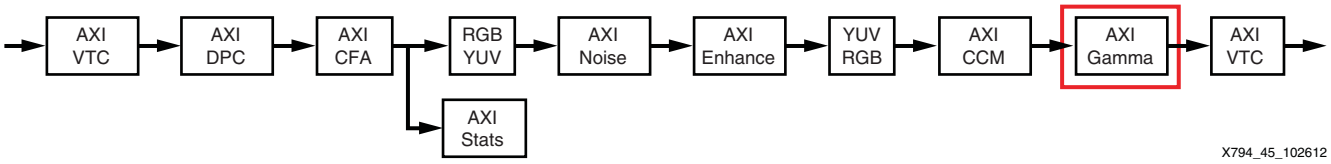

Figure 45: **AXI Gamma Core Pipeline Position**

For additional information about the Gamma Correction LogiCORE solution and the detailed product guide, refer to the Gamma Correction product page on Xilinx.com:

http://www.xilinx.com/products/intellectual-property/EF-DI-GAMMA.htm

Software Platform

An application to demonstrate the capabilities of the Zynq-7000 AP SoC PS and PL combination for mainstream video embedded systems is implemented on top of Linux kernel 3.x. Developers can easily tailor Linux to their particular applications by porting their applications and customizing open source software packages. The pre-verified Linux platform enables rapid software platform modification to adapt to hardware changes.

Zynq-7000 AP SoC-based 1080p60 Camera Application

A unified and multi-threaded Linux software application is implemented to demonstrate the capabilities of the Zynq-7000 AP SoC PS and PL combination for mainstream video embedded systems. The main application initializes the video processing pipeline, and allows design configuration via the USB-serial connection or via the network with a web-based GUI.

The block diagram in Figure 46 illustrates the general architecture of the Linux application.

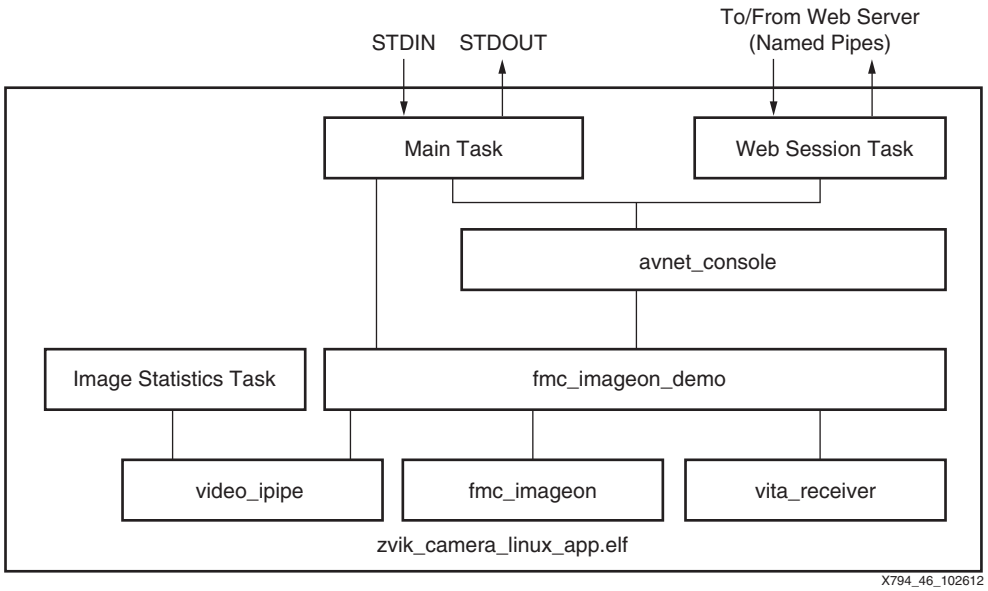

Figure 46: **1080p60 Camera Linux Application General Architecture**

The application has three tasks:

1. Main Task (`main.c`)
2. Image Statistics Task (vipp_stats_handler)
3. Web Session Task

Each of these tasks are described in subsequent sections.

The block diagram in Figure 47 shows the source files that make up the 1080p60 camera application.

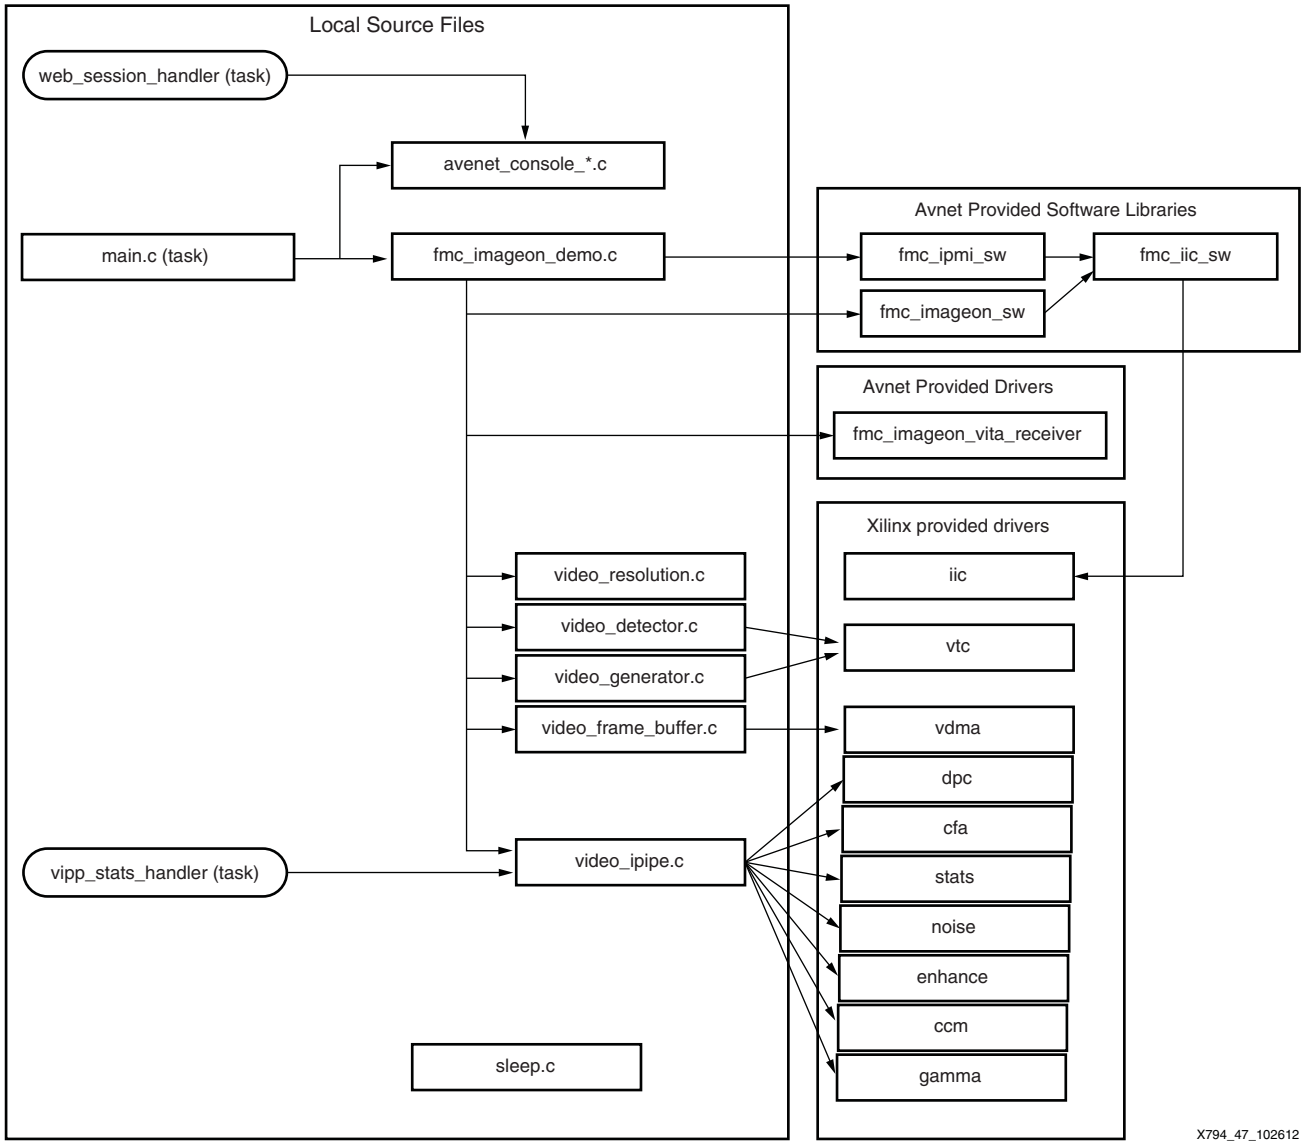

Figure 47: **1080p60 Camera Linux Application Source Files**

The `fmc_imageon_demo.c` file contains most of the top-level initialization code for the camera design.

The `avnet_console_*.c` files, which implement a text-based command interface, are optional and can be removed from the application. This command interface is used by the main task to provide user control via the STDIN and STDOUT pipes. The command interface is also used by the web session task, via named pipes, to provide control from a web page serviced by a web server.

Main Task

The main task is the main( ) function, which initializes the reference design. This function also:

- Initializes the VITA image sensor
- Initializes the image processing pipeline
- Initializes the video frame buffer
- Launches the other tasks (image statistics task, web session task)

When the reference design has been initialized, it provides a text-based command interface via the STDIN and STDOUT pipes.

The `main.c` source code is:

```
// ------------------------------------------------------------------------
// Main entry point.
//
int main()
{
   // Specify Base Addresses of all PCOREs
   init_base_addresses( &fmc_imageon_demo, 0 );

   // Initialize FMC-IMAGEON Demo
   fmc_imageon_demo_init( &fmc_imageon_demo );

   // Initialize Web Console
   print_avnet_console_web_app_header();
   start_avnet_console_web_application();

   // Initialize Serial Console
   print_avnet_console_serial_app_header();
   start_avnet_console_serial_application();

   while (1)
   {
      // Process user input from Serial Console
      if ( transfer_avnet_console_serial_data() )
      {
         // user requested to quit
         break;
      }
   }

   // Shutdown the FMC-IMAGEON Demo
   fmc_imageon_demo_quit( &fmc_imageon_demo );

   return 0;
}
```

Image Statistics Task

The image statistics task (vipp_stats_handler) is launched when the video image processing pipeline is initialized.

This task periodically reads the image statistics from the image sensor, and performs these application examples:

- auto gain
- auto exposure
- auto white balance
- global contrast (gamma equalization)

Figure 48 illustrates how the image statistics handler interacts with the image processing pipeline.

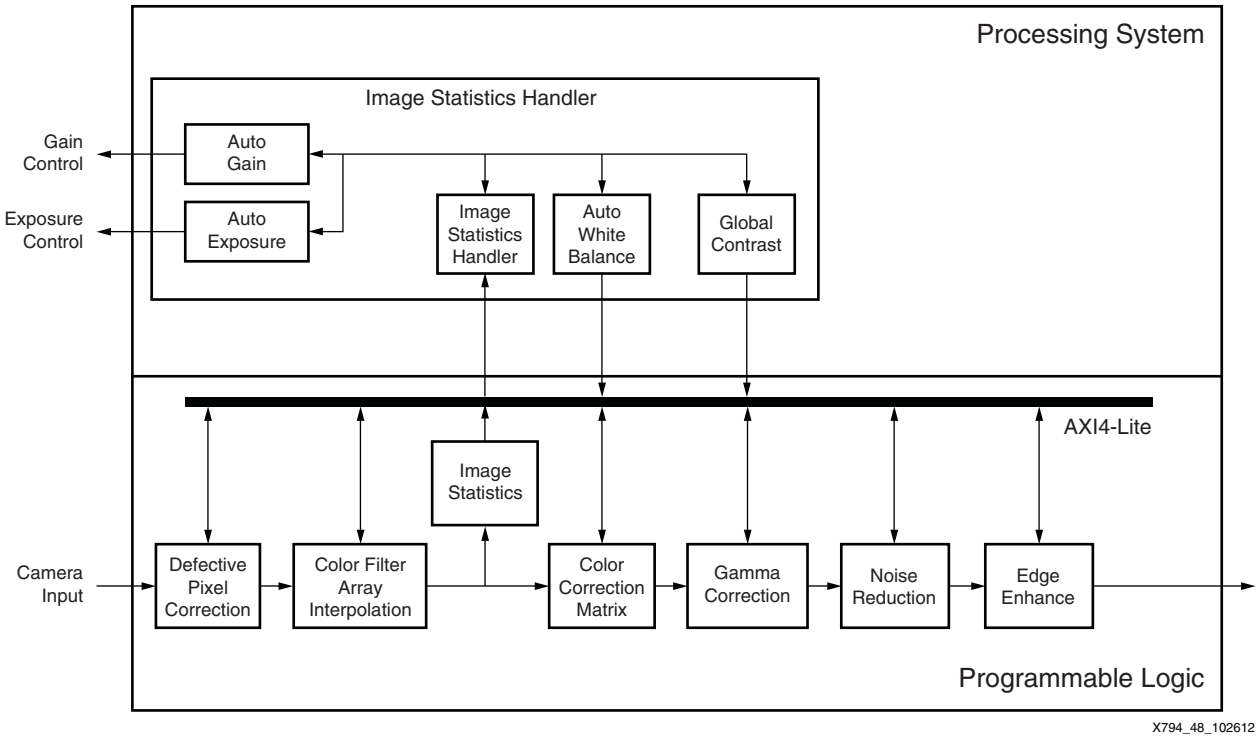

Figure 48: **Image Statistics Handler**

The image processing pipeline consists of these IP cores:

- Defective pixel correction
- Color filter array interpolation
- Image statistics
- Color correction
- Gamma correction
- Noise reduction
- Edge enhance

The image statistics IP core provides an important link with the Linux applications. It gathers statistics about the camera input, including intensity and chroma histograms, which are used to automatically adjust the image processing pipeline to improve image quality.

The image statistics task provides some interesting application examples that are all based on the image statistics IP core:

- Auto white balance: Attempts to determine the lighting conditions and applies a weighted sum of one or more of the pre-determined white balance corrections based on the calculated probability of each of the possible light sources using the color correction matrix IP core.
- Auto-gain: Based on the intensity of the image, reconfigures the image sensor gain setting.
- Auto-exposure: Based on the intensity of the image, reconfigures the image sensor exposure setting.
- Global contrast: Automatically determines a gamma correction look-up table.

Web Session Task

The web-based GUI is implemented with several applications. Figure 49 illustrates how these applications interact with each other.

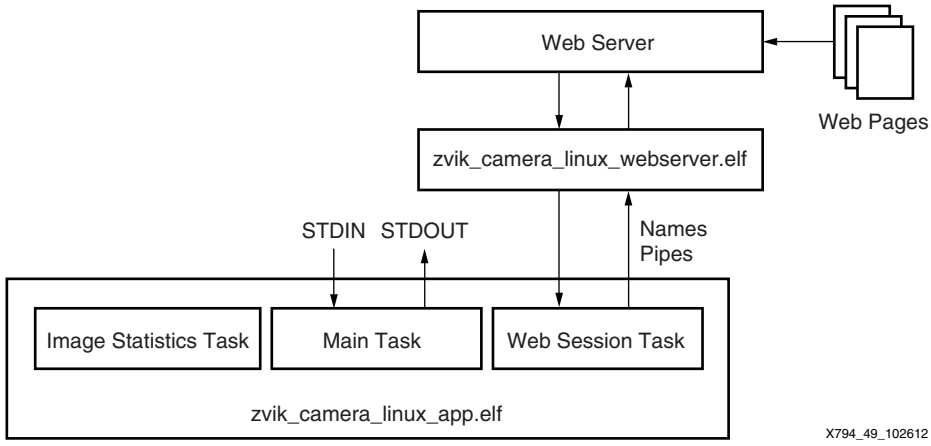

Figure 49: **Web-Based GUI Block Diagram**

The web server, a standard service provided by the open source BusyBox package in embedded Linux, is the engine that generates the reference design web-based GUI.

The web page (`index.html`) that makes up the web-based GUI uses these technologies:

- JavaScript
- CGI

When a CGI request is generated by the Web server, the `zvik_camera_linux_webserver.elf` application is invoked. When this occurs, the application translates the CGI request, which is in HTTP format, to text-based commands and sends the command to the `zvik_camera_linux_app.elf` application via a named pipe. The inverse of this process occurs for the response of each request or command.

Rebuilding the Hardware Platform

Licensing the Video and Image Processing Pack IP Cores

The image processing pipeline (iPipe) reference design uses several of the Xilinx Video and Image Processing Pack IP cores that must be licensed prior to use. Follow these steps to request an evaluation license:

1. Got to this website:

   http://www.xilinx.com/products/intellectual-property/EF-DI-VID-IMG-IP-PACK.htm
2. Click the **Evaluate** link located on the upper-left of the web page, as shown in Figure 50, and follow the on-line instructions.

Video and Image Processing Pack
XILINX
Evaluate
Order
Product Information
Resources
FAQ
High quality video and image processing IP cores to enable faster time-to-market
The Xilinx Video and Image Processing Pack provides a low cost bundled licensing option for all of the LogiCORE™ IP blocks listed in the key features section. Video
X794_50_102612

Figure 50: **Xilinx Video and Image Processing Pack Evaluation License Example**

3. The generated license file is sent via email. Follow the enclosed instructions to add the evaluation license features for the Video and Image Processing Pack.

Open and Build the Hardware Design Bitstream

1. Start the ISE tools.
   - On a Windows host, select **Start > All Programs > Xilinx Design Tools > ISE Design Suite 14.2 > EDK > Xilinx Platform Studio**.
   - On a Linux host, enter `xps` at a command prompt.
2. If necessary, close out the previous project by selecting **File > Close Project**.
3. In Project Commands, select **Open Project**.
4. Browse to `zvik_camera\hw` and select **system.xmp**. Click **Open** (Figure 51).

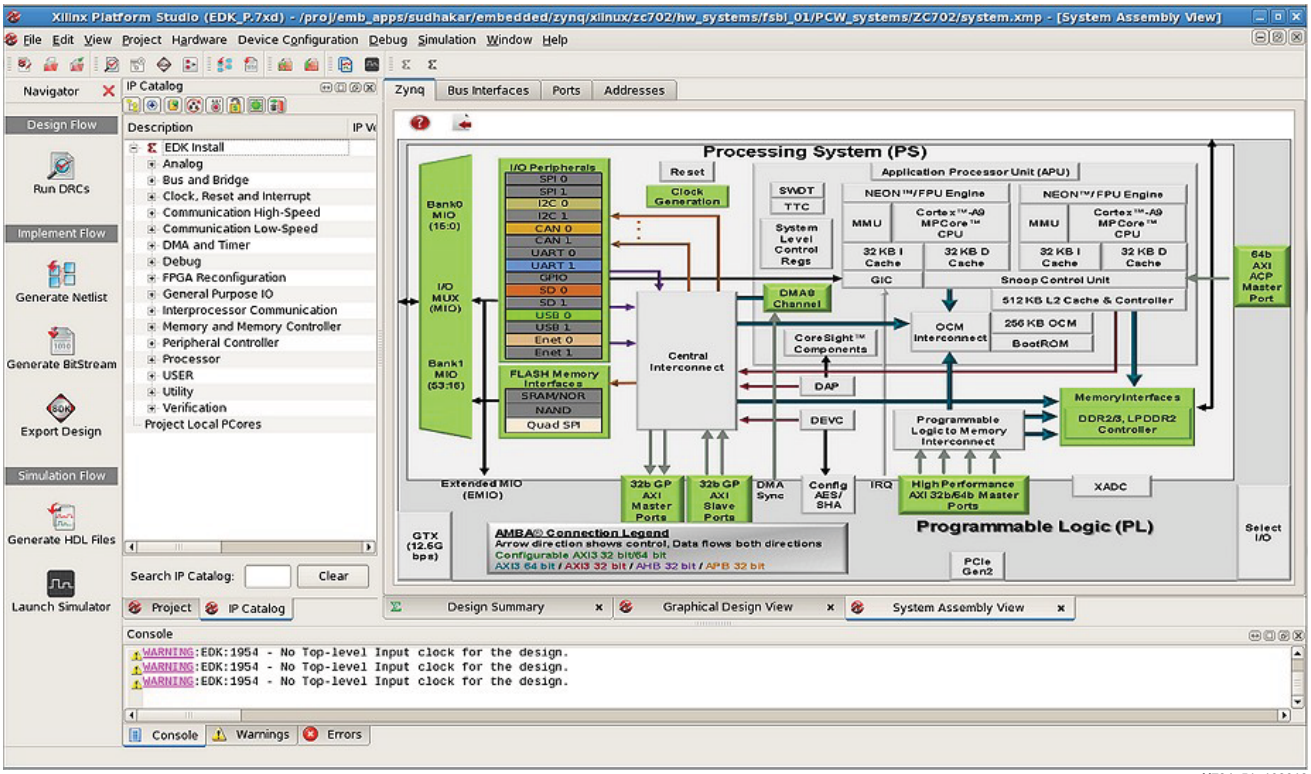

Figure 51: **Hardware Project Opened from ISE XPS**

Exporting the Base Hardware Platform to SDK

Because the base hardware platform is used with the Software Development Kit (SDK), information about the hardware platform must be provided to the SDK to allow development of software platforms and applications.

1. Import a predefined ZC702 evaluation board-specific configuration template to create a Zynq device configuration. This template guides the generation of MIO initialization code. Click the left-pointing red arrow just below the Bus Interfaces tab (Figure 52).

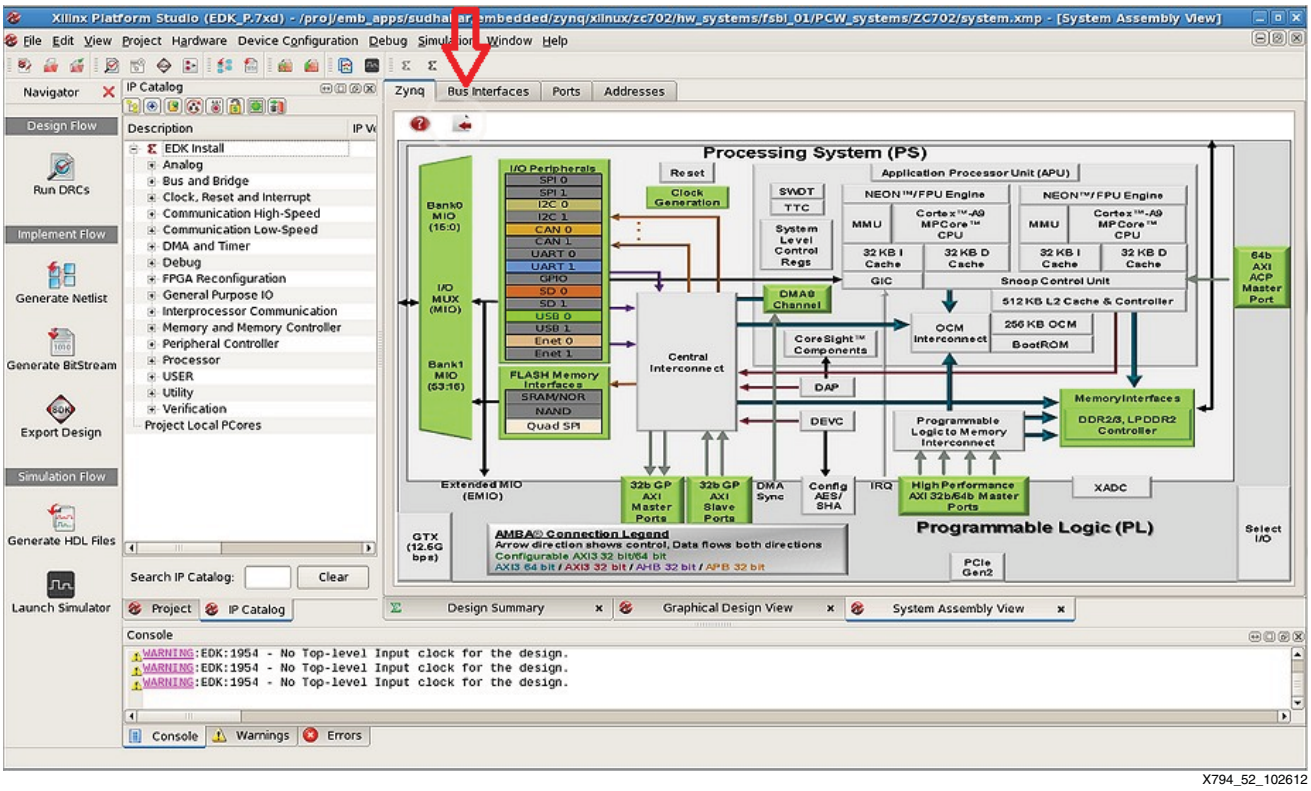

X794_52_102612

Figure 52: **Importing Board-Specific MIO Initialization Code**

2. Click **OK** after choosing the ZC702 evaluation board configuration file, then click **YES** to import the xml-based configuration file.

3. Under Implementation Flow, click **Export Design**, check **Include bitstream and BMM file**, and click **Export Only** as shown in Figure 53. The hardware description files along with Zynq device initialization C source code for the chosen evaluation board is stored at this location: `zvik_camera\hw\SDK\SDK_Export\hw`.

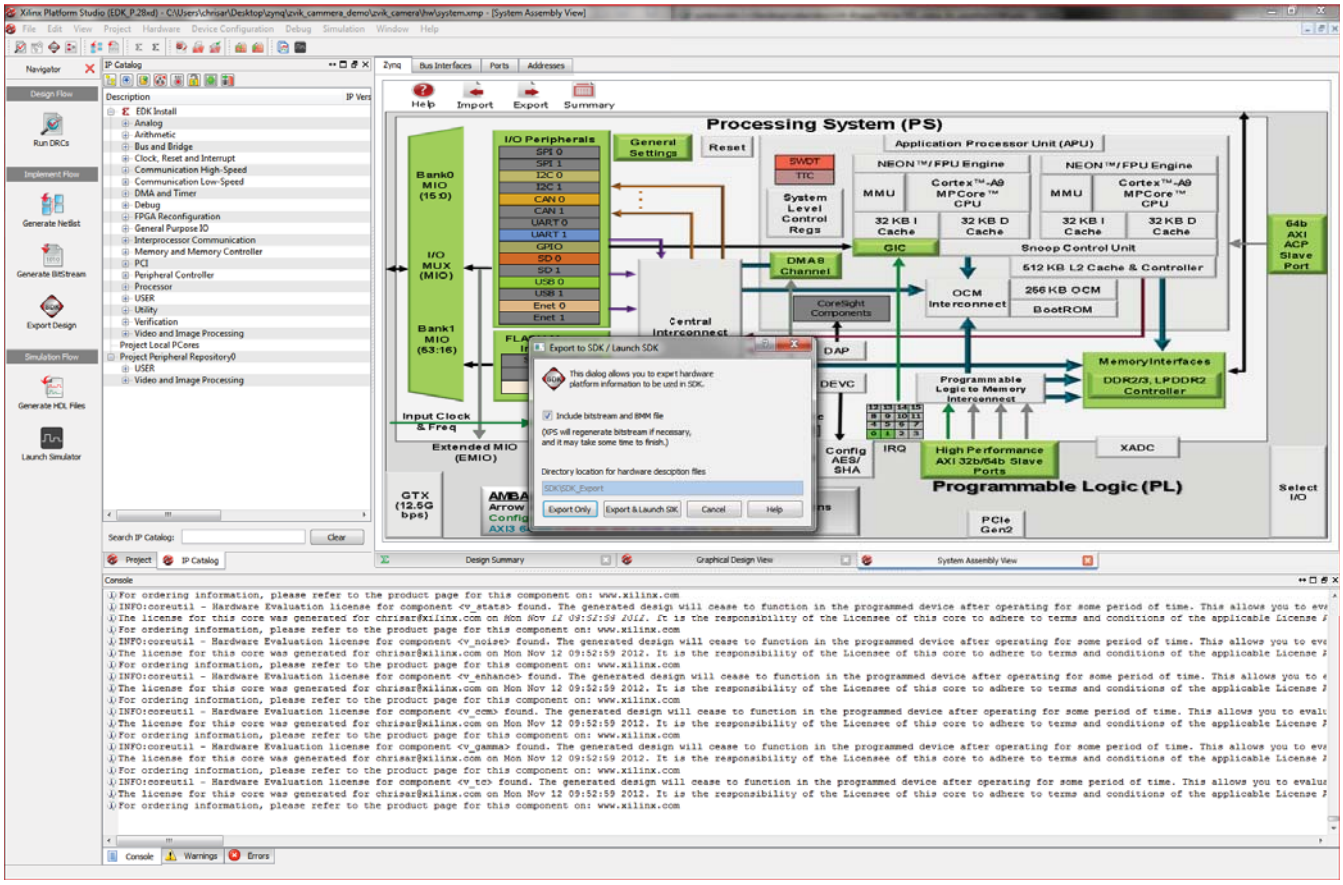

Figure 53: **Exporting the Hardware Design to SDK**

Rebuilding the Software Applications

Extracting the Application Archives

In the `zvik_camera\sw` directory, extract the archives shown in Table 12:

Table 12: **Application Archives**

Archive Name	Description
zvik_camera_linux_app	This is the main application for the 1080p60 camera design.
zvik_camera_linux_webserver	This is the CGI application that services requests from the web-based GUI.

Importing and Building the Linux Applications

The Xilinx SDK included in the ISE Design Suite version 14.2 or later can be used to build Linux applications.

To create a new SDK workspace to import and build Linux applications:

1. Launch the SDK tool. In Windows, select **Start > All Programs > Xilinx Design Tools > Xilinx ISE Design Suite > EDK > Xilinx Software Development Kit**. On a Linux host, enter **`xsdk`** at a command prompt.

2. When the Workspace Launcher appears, create a new directory as **`zvik_camera\sw\SDK_Linux_Workspace`**. Specify this directory as the new workspace and click **OK** in the Workspace Launcher.
3. When the SDK tool opens, a welcome screen is displayed. Close the welcome screen after browsing through the displayed information. When the welcome screen is closed, the Project Explorer tab is displayed as empty.

To import the Linux applications into the SDK workspace:

1. In the SDK tool, select **File > Import**.
2. In the import wizard, expand the General folder and select **Existing Projects into Workspace**. Click **Next**.
3. To specify the project sources root directory in the Select Root directory, click **Browse** and select **zvik_camera\sw**.
4. After the root directory is specified, the import wizard shows a list of projects available to import, as shown in Figure 54. Make these selections:
   - Ensure that the linux_app project is selected.
   - Select the **Copy projects into workspace** checkbox to make a local copy of the projects in the workspace when the import is done.

   Note: The projects in the import wizard might appear in a different order than that shown in Figure 54.

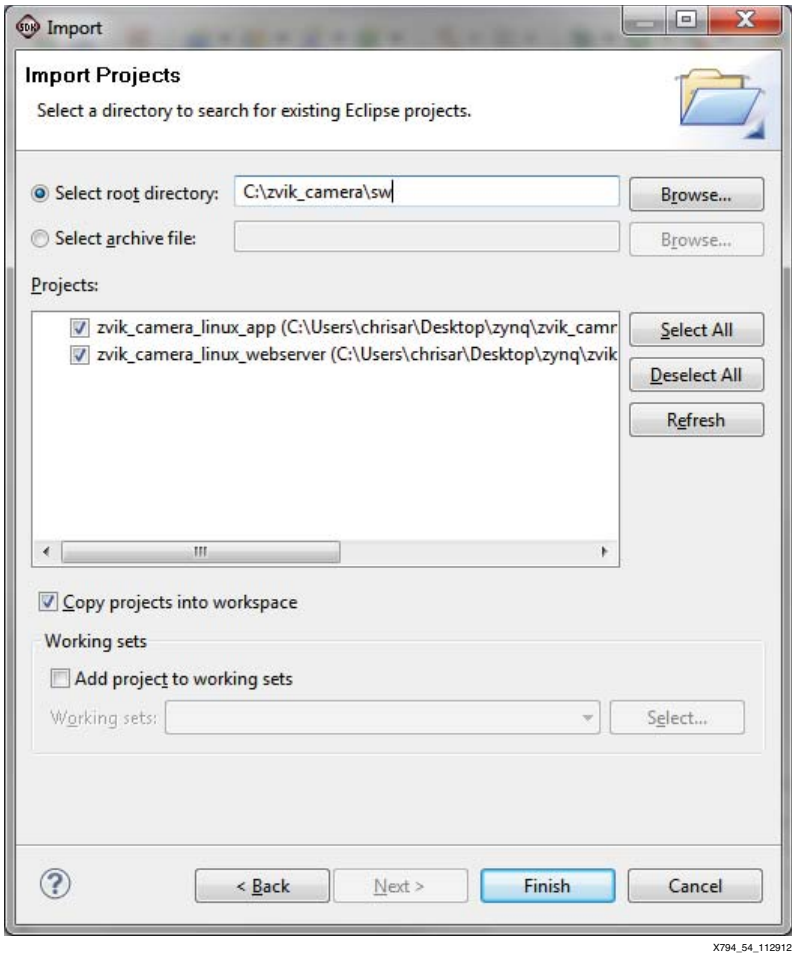

Figure 54: **Importing Linux Applications**

5. Click **Finish**. The SDK tool imports the selected projects. The software application is compiled during the import process.

Debugging the Linux Application

Before starting a remote debug session with the ZVIK, make sure the Linux application is NOT running on the ZVIK:

1. Open the serial console (115200 baud)
2. Type the quit command in the zvik_camera linux application:

```
zvik_camera>quit
quit


zvik_camera>
zynq>
```

3. At the Linux prompt, type the ifconfig command to confirm the ZVIK IP address:

```
zynq> ifconfig
eth0      Link encap:Ethernet  HWaddr 7E:CA:CF:54:6D:4E
          inet addr:192.168.1.10  Bcast:192.168.0.255  Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:93 errors:0 dropped:0 overruns:0 frame:0
          TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:17184 (16.7 KiB)  TX bytes:0 (0.0 B)
          Interrupt:54 Base address:0xb000

zynq>
```

4. Optionally, to permanently prevent the application from auto-starting on boot, edit the `launch_myapp.sh` script on the SD card and comment out the statement shown using the "#" character:

```
zynq> vi /mnt/launch_my_app.sh
# /mnt/zvik_camera_linux_app.elf
```

A remote connection can be established between the SDK tool and the ZVIK using Secure Shell (SSH) by following these steps:

1. In the SDK tool, select **Window > Open Perspective > Other ...**.
2. Select **Remote System Explorer**, then click **OK**.
3. In the Remote Systems tab, click the new connection icon as shown in Figure 55.

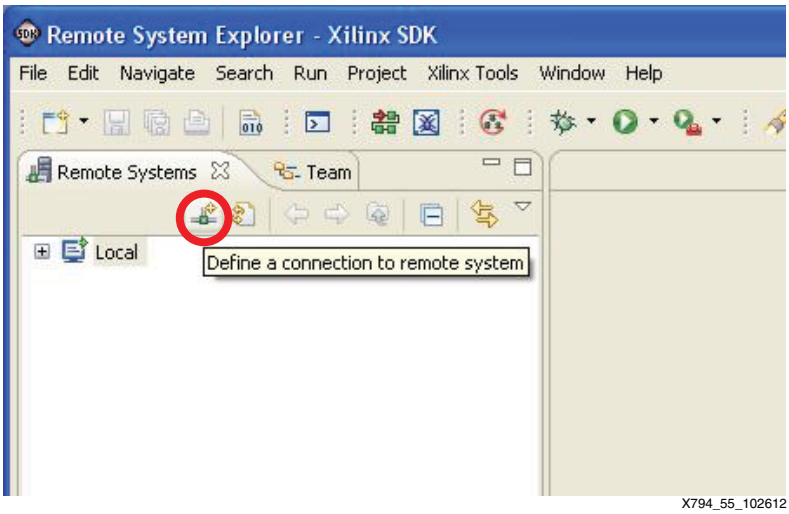

Figure 55: **Define a Connection to a Remote System**

4. Select **SSH Only**, then click **Next**.

5. In the Host name field, type the IP address of the ZVIK (i.e., **`192.168.1.10`**) then click **Finish**.
6. In the Remote Systems tab, open the 192.168.1.10 section, then open the Sftp Files section.
7. Double-click the Root section.
8. In the Enter Password dialog box, enter **`root`** for both user ID and password.
9. Select **Save User ID** and **Save password**, then click **OK**.
10. If a dialog box appears with a warning about the authenticity of the 192.168.1.10 host, click **Yes**.
11. If a dialog box appears with a warning that known_hosts does not exist, click **Yes**.
12. Navigate to the `/mnt` directory. The contents of the SD card should be visible.

To open a terminal to enter Linux commands on the ZVIK:

1. In the Remote Systems tab, Select **Ssh Terminals**.
2. Right-click and select **Launch Terminal**.

The `zvik_camera_linux_app` application can be debugged remotely with the SDK tool by following these steps:

1. Switch to the C/C++ perspective by selecting **Window > Open Perspective > Other**, then select **C/C++ (Default)**.
2. Select the `zvik_camera_linux_app` application.
3. Right-click and select **Debug As**.
4. Select **Debug Configurations…**.
5. In the Debug Configurations dialog box, select **Remote ARM Linux Application**, then click the new launch configuration button, as shown in Figure 56.

Figure 56: **New Launch Configuration Button**

6. In the Connection list, select the ZVIK IP address (i.e., **192.168.1.10**).
7. In the Remote Absolute File Path for C/C++ Application field, specify the path **`/tmp/zvik_camera_linux_app.elf`**
8. Click **Apply**.
9. Click **Debug**. The application is downloaded to the specified remote path and the Debug perspective opens.
10. Click **Yes** when asked to open the debug perspective.

11. In the Console tab, click the verbose console mode button as shown in Figure 57 to disable the verbose console mode.

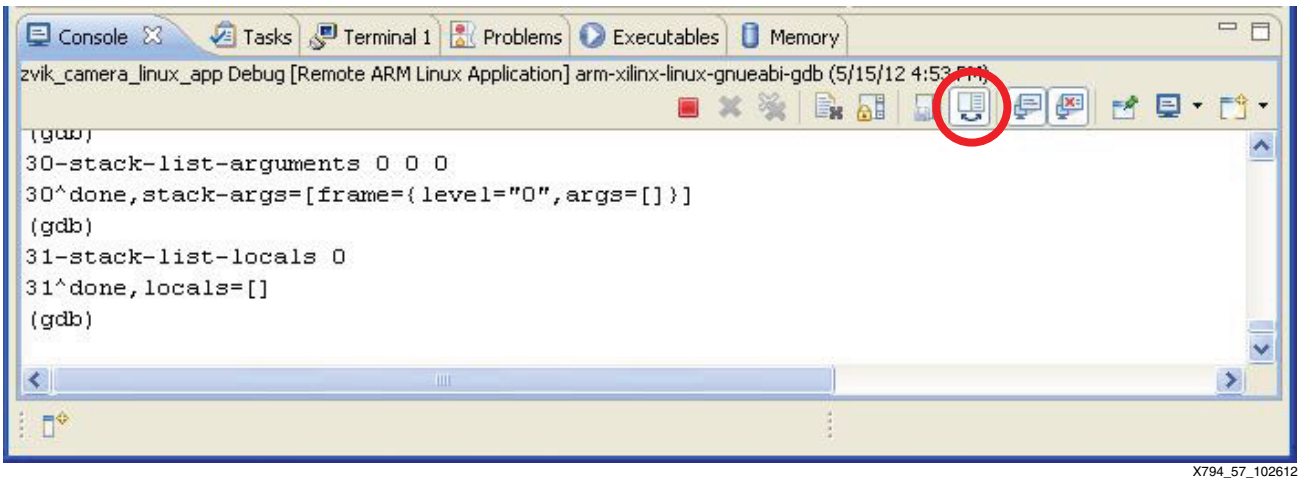

Figure 57: **Verbose Console Mode**

12. Click the display selected console button, and select the `zvik_camera_linux_app.elf` entry, as shown in Figure 58.

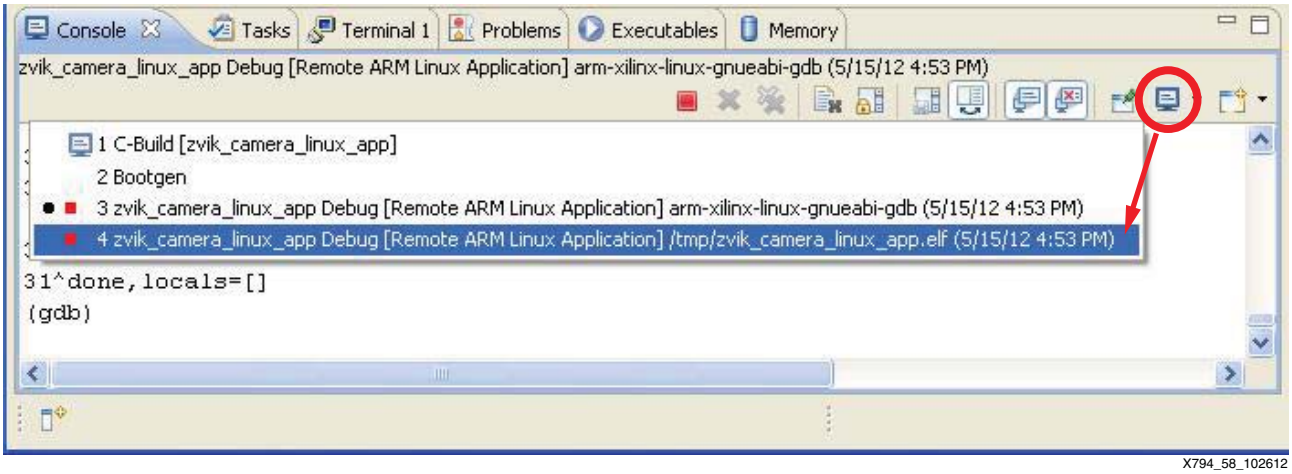

Figure 58: **Display Selected Console**

13. Click the **Resume** button (or press F8). The console output shown in Figure 59 is displayed.

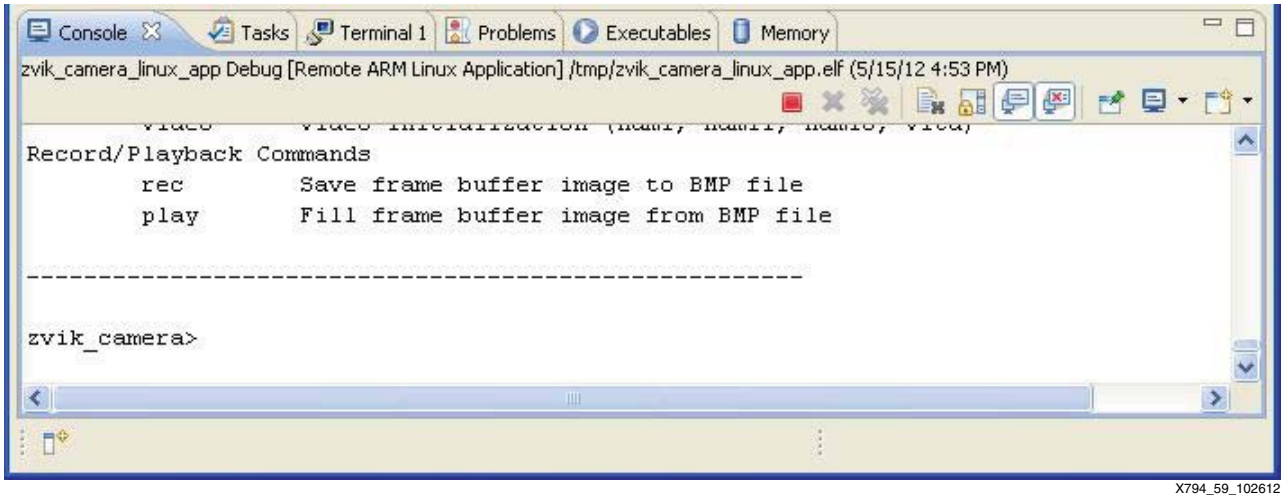

Figure 59: **Example Console Output**

14. Add this breakpoint:
    - Source file: **avnet_console.c**
    - Function: **avnet_console_record_command**
15. Select **Window > Open Perspective > C/C++** to view the C/C++ perspective.
16. Expand the `zvik_camera_linux_app` application, then double-click the **avnet_console.c** source file.
17. Search for the `avnet_console_record_command` function, then double-click the left margin to enable a breakpoint. Select the command **Search > C/C++ Search** and enter the function name. The search results appear in a new tab in a window below the source window (see Figure 60).

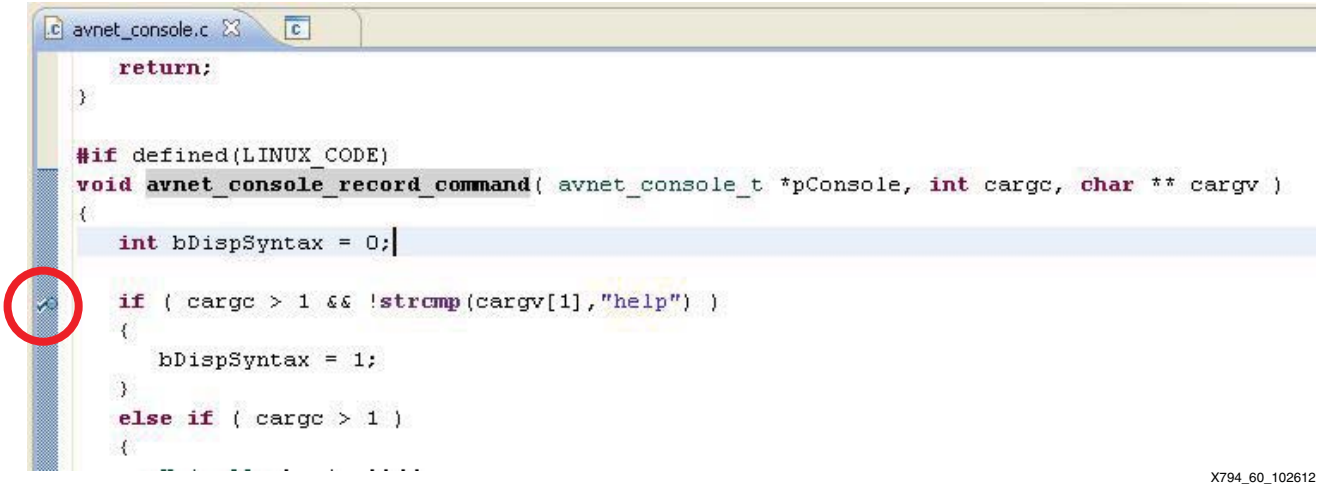

Figure 60: **Breakpoint Search Results**

18. Switch back to the Debug perspective.
19. On the console, type **rec /mnt/image1.bmp**, then press enter. The debugger stops on the specified breakpoint.

20. Click the **Resume** button (or press F8). The contents of the video frame buffer are saved to a BMP file.
21. Switch to the Remote System Explorer perspective.
22. Select the **mnt** directory, then right-click and select **Refresh**. The newly created `image1.bmp` is now visible.
23. Select the **image1.bmp** file, then right-click and select **Open With > Default Editor**. The image file is now visible in the editor window.
24. Switch back to the Debug perspective.
25. Open a web browser and enter the address **`http://192.168.1.10`**.
26. When loaded, the web page invokes the **`rec /mnt/www/webshot.bmp`** command. The debugger is stopped on the specified breakpoint again.
27. Disable the breakpoint.
28. Click **Resume** (or press F8).

The ZVIK camera linux application has successfully been remotely debugged.

Preparing the SD Card Boot Image

To configure and boot the ZC702 board with a customized hardware design and Linux platform, the ISE tools and provided script files should be used to prepare the image files described in Table 13.

Table 13: **ZC702 Evaluation Board Image Files**

Image Name	Description
`BOOT.BIN`	The `zynq_fsbl.elf`, `u-boot.elf`, and `system.bit` files combined and renamed `BOOT.BIN` to satisfy licensing requirements.
`launch_my_app.sh`	Tells the system what application to launch.
`config_my_ip.sh`	Specifies the default IP address.
`devicetree.dtb`	Device tree blob for booting a RAM disk.
`ramdisk8M.image.gz`	BusyBox-based Linux root file system.
`zImage`	Linux kernel Image.
`www`	Web-based GUI files.
`www/cgi-bin/zvik_camera_linux_webserver.elf`	CGI application for web-based GUI.
`zvik_camera_linux_app.elf`	Main Linux application for camera design.

The `BOOT.BIN` file consists of the Zynq FSBL binary image (`zynq_fsbl.elf`), ARM Linux u-boot binary image (`u-boot.elf`), and the FPGA hardware design bitstream file (`system.bit`).

To update the SD card with custom Linux applications, copy the custom ELF files to the SD card in the location indicated in Table 13. Use the mouse to copy this file from the C/C++ Perspective of the SDK user interface, then replace the file of the same name in the `C:\zvik_camera\binaries\sd_content` folder.

To update the SD card with a custom hardware design bitstream, copy the `system.bit` file from `zvik_camera\hw\SDK\SDK_Export\hw` to the `zvik_camera\binaries\boot_image` directory, regenerate the `BOOT.BIN` file as described in Regenerating the BOOT.BIN File, then copy the custom `BOOT.BIN` file to the SD card.

Regenerating the BOOT.BIN File

The `BOOT.BIN` file can be regenerated using the SDK tool by following these steps:

1. In the SDK tool window, select **Xilinx Tools > Create Boot Image** (see Figure 61).

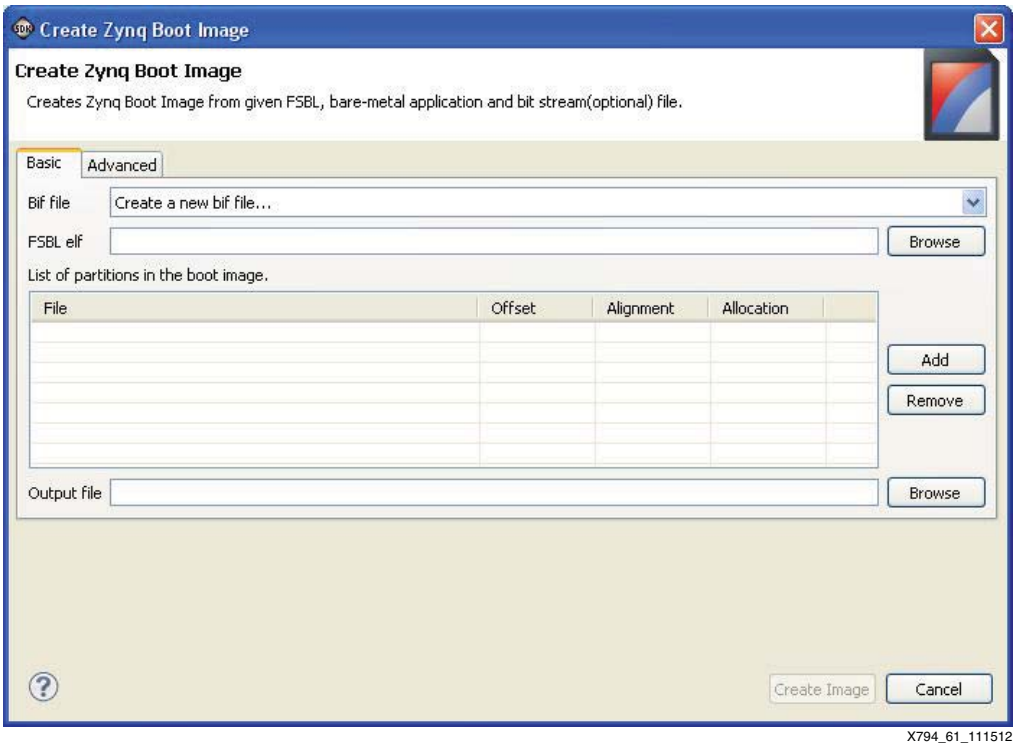

Figure 61: **Create Zynq Boot Image Dialog**

2. Click the **Browse** button under the Basic tab adjacent to the FSBL elf entry.
3. Select the **zvik_camera\binaries\boot_image\zynq_fsbl_0.elf** file and click **Open**.
4. Click the **Add** button.
5. Select the **zvik_camera\binaries\boot_image\system.bit** file and click **Open**.
6. Click the **Add** button again.
7. Select the **zvik_camera\binaries\boot_image\u-boot.elf** file and click **Open**.
8. Click the **Browse** button adjacent to the Output Folder entry.
9. Select the **zvik_camera\binaries\boot_image** file directory and click **OK**.
10. Click the **Create Image** button.
11. If the “Output file already exists” dialog appears, click **OK**.
12. Rename the generated file `u-boot.bin` to **`BOOT.BIN`**.
13. Copy the updated `BOOT.BIN` file to the SD card.

Linux Kernel Image and Linux Root File System

It is beyond the scope of this application note to provide instructions for regenerating the Linux kernel image and the Linux root file system.

It is assumed that the Linux root file system is created as described here:

http://wiki.xilinx.com/zynq-rootfs

or use the pre-built RAM disk image available here:

http://xilinx.wdfiles.com/local--files/zynq-release-14-2/14.2-release.tar.gz

For this reference design, the `/etc/init.d/rcS` file inside the `ramdisk8M.image.gz` archive was modified as shown in Figure 62.

```
#!/bin/sh

echo "Starting rcS..."

echo "++ Mounting filesystem"
mount -t proc none /proc
mount -t sysfs none /sys
mount -t tmpfs none /tmp

echo "++ Setting up mdev"

echo /sbin/mdev > /proc/sys/kernel/hotplug
mdev -s

mkdir -p /dev/pts
mkdir -p /dev/i2c
mount -t devpts devpts /dev/pts

echo "++ Mounting SD card to /mnt"
mount /dev/mmcblk0p1 /mnt

echo "++ Configuring IP Address"
/mnt/config_my_ip.sh

echo "++ Starting telnet daemon"
telnetd -l /bin/sh

echo "++ Starting http daemon"
#httpd -h /var/www
httpd -h /mnt/www

echo "++ Starting ftp daemon"
tcpsvd 0:21 ftpd ftpd -w /&

echo "++ Starting dropbear (ssh) daemon"
dropbear

echo "rcS Complete"

/mnt/launch_my_app.sh
```

Mount SD Card Automatically

Call config_my_ip.sh Script on SD Card to Configure IP Address

Configure Web Server To Use Files in WWW Directory on SD Card

Call launch_my_app.sh Script on SD Card to Launch Camera Application Automatically

X794_62_111512

Figure 62: **Modifications to `/etc/init.d/rcS` File**

To customize the `/etc/init.d/rcS` file, perform these steps on a Linux PC:

1. Copy the RAM disk image to the Linux host.
2. Unzip the contents of the image:

   ```
   gzip -dcv ./ramdisk8M.image.gz > /ramdisk8M.image
   ```

3. Mount the RAM disk image:

   ```
   mkdir ramdisk8M
   sudo mount -o loop ramdisk8M.image ramdisk8M/
   ```

4. Modify the contents as necessary:

   ```
   sudo vi ramdisk8M/etc/init.d/rcS
   ```

5. Unmount the ramdisk image:

   ```
   sudo umount ramdisk8M/
   ```

6. Zip the contents of the image:

   ```
   gzip -v9 ramdisk8M.image
   ```

7. Copy the RAM disk image back to the SD card.

Appendix

Table 14 lists the acronyms used in this application note.

Table 14: **Acronyms**

Acronym	Definition
DPC	Defective Pixel Correction
EDK	Embedded Development Kit
FMC	FPGA Mezzanine Card
FSBL	First Stage Boot Loader
PS	Processing System
PL	Programmable Logic (FPGA logic cell array)
SDK	Software Development Kit
TPG	(Video) Test Pattern Generator
VTC	Video Timing Controller
VDMA	Video Direct Memory Access
ZVIK	Zynq-7000 All Programmable SoC Video and Imaging Kit

References

1. To search the Answer Database of silicon, software, and IP questions and answers, or to create a technical support WebCase, see:

   http://www.xilinx.com/support

For a comprehensive listing of Video and Imaging application notes, white papers, reference designs and related IP cores, see the Video and Imaging Resources page at:

http://www.xilinx.com/esp/video/refdes_listing.htm#ref_des

These documents provide supplemental material useful with this application note.

Zynq-7000 All Programmable SoC Documents and Links

1. Zynq-7000 All Programmable SoC ZC702 Evaluation Kit documentation page: http://www.xilinx.com/support/documentation/zc702.htm
2. Xcell Journal, Issue 81, Fourth Quarter 2012 http://www.xilinx.com/publications/archives/xcell/Xcell81.pdf#Oct12NL
3. UG585, *Zynq-7000 All Programmable SoC Technical Reference Manual*
4. DS406, *LogiCORE IP Processor System Reset Module Product Specification*
5. DS768, *LogiCORE IP AXI Interconnect*
6. Xilinx Open Source ARM Git Repository: http://git.xilinx.com/
7. UG798, *Xilinx Design Tools: Installation and Licensing Guide*
8. Xilinx ARM GNU Tools: http://wiki.xilinx.com/zynq-tools
9. Using Git: http://wiki.xilinx.com/using-git
10. UG821, *Zynq-7000 All Programmable SoC Software Developers Guide*
11. Xilinx Zynq-7000 All Programmable SoC website: http://www.xilinx.com/products/silicon-devices/soc/zynq-7000
12. Zynq-7000 All Programmable SoC Product Table: http://www.xilinx.com/publications/prod_mktg/zynq7000/Zynq-7000-combined-product-table.pdf
13. DS190, *Zynq-7000 All Programmable SoC Overview*
14. git: The fast version control system home page: http://git-scm.com/
15. Zynq Linux: Downloading the Kernel Tree: http://xilinx.wikidot.com/zynq-linux#toc7
16. Zynq Linux: Configuring and Building the Linux Kernel: http://xilinx.wikidot.com/zynq-linux#toc8
17. Xilinx Open Source Linux: http://wiki.xilinx.com/open-source-linux
18. Xilinx Device Tree Generator: http://xilinx.wikidot.com/device-tree-generator
19. Device Tree general information: http://devicetree.org/Main_Page
20. AMBA AXI4-Stream Protocol Specification: http://infocenter.arm.com/help/index.jsp?topic=/com.arm.doc.ihi0051a/index.html
21. PCI-SIG Documentation: http://www.pcisig.com/specifications
22. Xilinx PlanAhead Design and Analysis Tool website: http://www.xilinx.com/tools/planahead.htm
23. UG873, *Zynq-7000 All Programmable SoC Concepts, Tools, and Techniques*
24. UG673, *Quick Front-to-Back Overview Tutorial: PlanAhead Design Tool*

Video Documents

25. PG001, *LogiCORE IP Color Correction Matrix Product Guide*
26. PG002, *LogiCORE IP Color Filter Array Interpolation Product Guide*
27. PG003, *LogiCORE IP Image Edge Enhancement Product Guide*
28. PG004, *LogiCORE IP Gamma Correction Product Guide*
29. PG005, *LogiCORE IP Defective Pixel Correction Product Guide*
30. PG008, *LogiCORE IP Image Statistics Product Guide*
31. PG011, *LogiCORE IP Image Noise Reduction Product Guide*
32. PG012, *LogiCORE IP Chroma Resampler Product Guide*
33. PG013, *LogiCORE IP RGB To YCrCb Color-Space Converter Product Guide*
34. PG014, *LogiCORE IP YCrCb To RGB Color-Space Converter Product Guide*
35. PG016, *LogiCORE IP Video Timing Controller Product Guide*
36. PG020, *LogiCORE IP AXI Video Direct Memory Access Product Guide*
37. UG761, *AXI Reference Guide*
38. UG934, *AXI4-Stream Video IP and System Design Guide*

Additional Useful Documents

Documents associated with other software, tools, and IP used by the design are available at these vendor or public websites:

39. Silicon Labs CP210x USB to UART Bridge VCP Drivers:
    http://www.silabs.com/products/mcu/Pages/USBtoUARTBridgeVCPDrivers.aspx
40. X-Rite ColorChecker Classic
    http://xritephoto.com/ph_product_overview.aspx?ID=1192
41. X-Rite Judge II
    http://www.xrite.com/product_overview.aspx?ID=1131

Additional Useful Sites for Boards and Kits

More information on Zynq-7000 family boards, FMC extension cards, and other kits based on the Zynq-7000 All Programmable architecture is available here:

42. Xilinx Zynq-7000 All Programmable SoC Boards and Kits:
    http://www.xilinx.com/products/boards_kits/zynq-7000.htm
43. Zynq-7000 All Programmable SoC ZC702 Evaluation Kit:
    http://www.xilinx.com/ZC702
44. Xilinx Zynq Embedded Processors Base TRD wiki page:
    http://wiki.xilinx.com/zc702-base-trd
45. Xilinx Zynq-7000 All Programmable SoC Video and Imaging Kit:
    http://www.xilinx.com/products/boards-and-kits/DK-Z7-VIDEO-G.htm
46. ON Semiconductor Image Sensor with HDMI Input/Output FMC bundle:
    http://www.em.avnet.com/fmc-imageon-v2000c

Revision History

The following table shows the revision history for this document.

Date	Version	Description of Revisions
11/22/12	1.0	Initial Xilinx release.
11/29/12	1.1	Removed references to targeted reference design (TRD). Updated Figure 53, page 46 and Figure 54, page 47. Updated the path for the hardware description files and Zynq device initialization C source code in Exporting the Base Hardware Platform to SDK, page 45. Added path for `system.bit` file in Preparing the SD Card Boot Image, page 52.
01/02/13	1.2	Added Reference Design File. Updated Figure 27, Figure 28, Figure 30, Figure 31, and Figure 32.

Notice of Disclaimer

The information disclosed to you hereunder (the “Materials”) is provided solely for the selection and use of Xilinx products. To the maximum extent permitted by applicable law: (1) Materials are made available "AS IS" and with all faults, Xilinx hereby DISCLAIMS ALL WARRANTIES AND CONDITIONS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR ANY PARTICULAR PURPOSE; and (2) Xilinx shall not be liable (whether in contract or tort, including negligence, or under any other theory of liability) for any loss or damage of any kind or nature related to, arising under, or in connection with, the Materials (including your use of the Materials), including for any direct, indirect, special, incidental, or consequential loss or damage (including loss of data, profits, goodwill, or any type of loss or damage suffered as a result of any action brought by a third party) even if such damage or loss was reasonably foreseeable or Xilinx had been advised of the possibility of the same. Xilinx assumes no obligation to correct any errors contained in the Materials or to notify you of updates to the Materials or to product specifications. You may not reproduce, modify, distribute, or publicly display the Materials without prior written consent. Certain products are subject to the terms and conditions of the Limited Warranties which can be viewed at http://www.xilinx.com/warranty.htm; IP cores may be subject to warranty and support terms contained in a license issued to you by Xilinx. Xilinx products are not designed or intended to be fail-safe or for use in any application requiring fail-safe performance; you assume sole risk and liability for use of Xilinx products in Critical Applications: http://www.xilinx.com/warranty.htm#critapps.

Automotive Applications Disclaimer

XILINX PRODUCTS ARE NOT DESIGNED OR INTENDED TO BE FAIL-SAFE, OR FOR USE IN ANY APPLICATION REQUIRING FAIL-SAFE PERFORMANCE, SUCH AS APPLICATIONS RELATED TO: (I) THE DEPLOYMENT OF AIRBAGS, (II) CONTROL OF A VEHICLE, UNLESS THERE IS A FAIL-SAFE OR REDUNDANCY FEATURE (WHICH DOES NOT INCLUDE USE OF SOFTWARE IN THE XILINX DEVICE TO IMPLEMENT THE REDUNDANCY) AND A WARNING SIGNAL UPON FAILURE TO THE OPERATOR, OR (III) USES THAT COULD LEAD TO DEATH OR PERSONAL INJURY. CUSTOMER ASSUMES THE SOLE RISK AND LIABILITY OF ANY USE OF XILINX PRODUCTS IN SUCH APPLICATIONS.